

Grid-Connected Solar Microinverter Reference Design Using a dsPIC[®] Digital Signal Controller

INTRODUCTION

Due to global environmental concerns, photovoltaic (PV) systems (i.e., solar panels) are becoming more common as a renewable energy source.

The main drawbacks of PV energy are the high cost of manufacturing silicon solar panels and the low conversion efficiency. However, with the latest techniques in manufacturing, PV systems are becoming more efficient, as well as cost effective.

The conversion of the output voltage from a solar panel into usable DC or AC voltage must be done at its Maximum Power Point, or MPP. MPP is the PV output voltage at which the PV module delivers maximum energy to load.

SOLAR-POWERED SYSTEM SPECIFICATIONS, DEMANDS, AND STANDARDS

Interfacing a solar inverter module with the power grid involves two major tasks. One is to ensure that the solar inverter module is operated at the Maximum Power Point (MPP). The second is to inject a sinusoidal current into the grid. Since the inverter is connected to the grid, the standards given by the utility companies must be obeyed. The EN61000-3-2, IEEE1547 standards, and the U.S. National Electrical Code (NEC) 690, are worth considering. These standards deal with issues like power quality, detection of islanding operation, grounding, and so on.

These inverters must be able to detect an islanding situation, and take appropriate action in order to prevent bodily harm and damage to equipment connected to the grid. Islanding is the continued operation of the inverter when the grid has been removed intentionally, by accident, or by damage. In other words, if the grid has been removed from the inverter; the inverter should then stop supplying power to the grid or energizing the grid.

The most common solar technologies today are the monocrystalline and multi-crystalline silicon modules. A PV cell can be modeled as shown in Figure 1, and its electrical characteristics are shown in Figure 2. The MPP voltage range for these PV modules is normally defined in the range from 27V to 45V, at a power generation of approximate 200W, and their open-circuit voltage is below 45V.

In order to capture the maximum energy from the PV module, solar inverters must guarantee that the PV module is operated at the MPP. This is accomplished by the maximum power point control loop known as the Maximum Power Point Tracker (MPPT). It also involves PV output voltage ripple at the terminals of the PV module being sufficiently small, in order to operate around the MPP without too much variation in PV current.

FIGURE 1: SIMPLIFIED MODEL OF A PV CELL


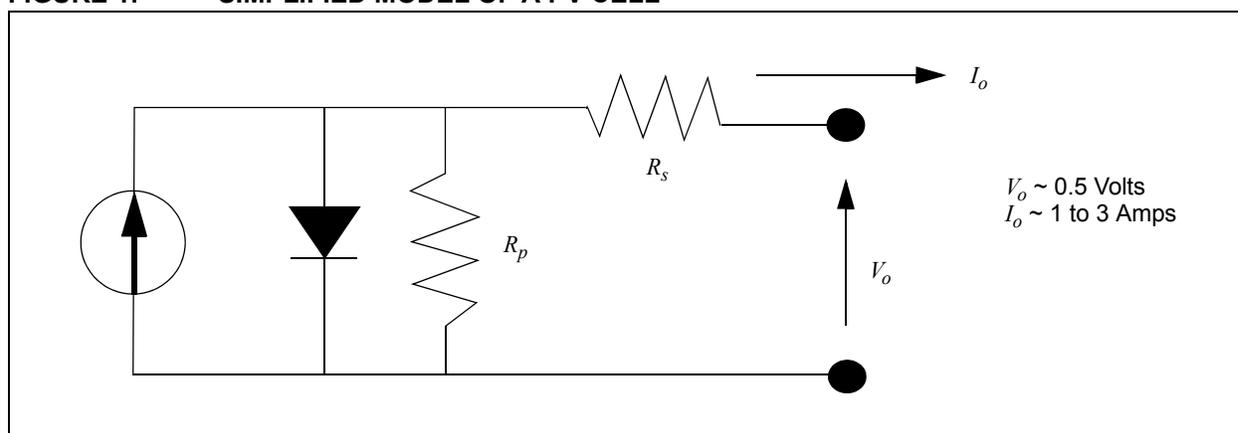


FIGURE 2: PV MODULE ELECTRICAL CHARACTERISTICS

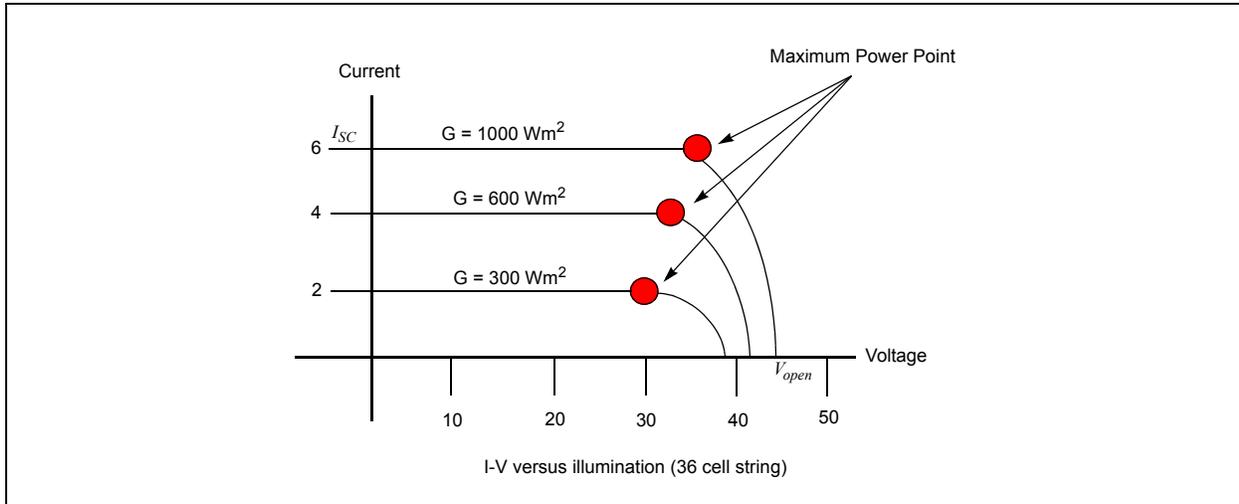

ELECTRICAL CHARACTERISTICS OF SILICON PV CELLS

PV cells are semiconductor devices, with electrical characteristics similar to a diode. The PV cell operates as a current source when it comes in contact with a UV light source.


A PV cell will behave differently depending on the size of the PV panel or type of load connected to it and the intensity of sunlight (illumination). This behavior is called the PV cell characteristics.

The characteristics of a PV cell are described by the current and voltage levels when different loads are connected. When the cell is exposed to sunlight and is not connected to any load, there is no current flowing and the voltage across the PV cell reaches its maximum. This is called an open circuit (V_{open}) voltage. When a load is connected to the PV cell, current flows through the circuit and the voltage drops. The current is maximum when the two terminals are directly connected

with each other and the voltage is zero. The current in this case is called a short-circuit (I_{sc}) current, as shown in Figure 2. Comparisons can be made to the electrical characteristics of different PV cells as these measurements are made at standard test conditions (STC), which are defined as a light intensity of 1000 W/m² and a temperature of 25°C.

The light intensity as well as temperature affects the PV cell characteristics. Current is directly proportional to light intensity. Voltage also changes with fluctuating light levels, but the change in the voltage is less. Voltage is more affected by changes in the temperature of the PV cell than the current. An increase in cell temperature decreases the voltage and increases the current by a very small amount. How these influences affect an I-V curve is illustrated in Figure 3. It can be observed that changing (decreasing) the light intensity has a much greater effect than changing (increasing) the temperature. This is true for all commonly used PV materials.

FIGURE 3: PV MODULE ELECTRICAL CHARACTERISTICS WITH LIGHT INTENSITY AND TEMPERATURE

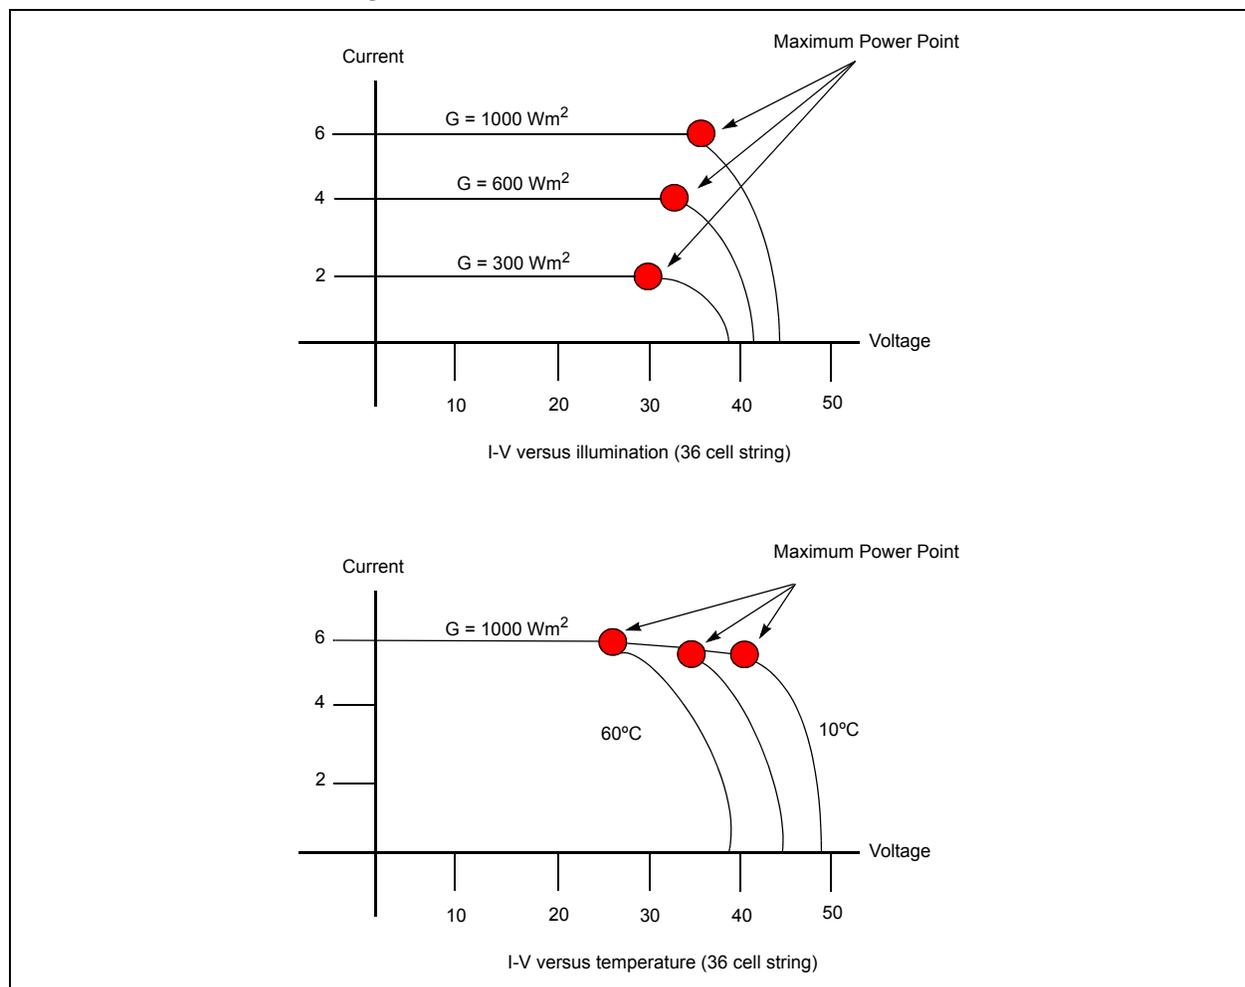


AN1338

Maximum Power Point (MPP)

The Maximum Power Point (MPP) is the point in which the maximum power is delivered from the solar cell to the PV system. Solar cells operate over an extensive range of voltages and current. By continuously increasing the resistive load on a PV cell from zero to a high value, the MPP can be determined. As shown in Figure 4, the MPP can be observed based on the illumination of the PV panel.

FIGURE 4: PV MODULE ELECTRICAL CHARACTERISTICS MAXIMUM POWER POINT

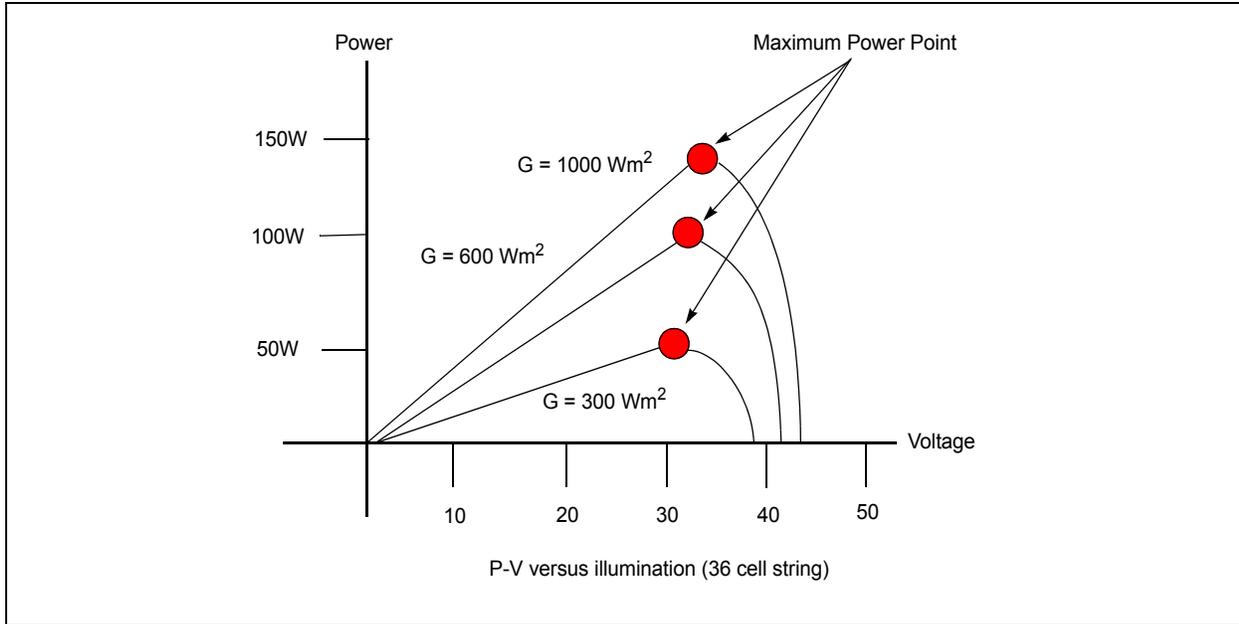


SOLAR POWER SYSTEM EVOLUTION

PV cells have been used in many applications to generate electricity. A few of these are briefly discussed in this section.

Log Cabin System – A simple 12 volt DC system provides lighting for isolated cabins. Low wattage (<100W) solar panels are connected directly to a battery. The battery is connected to lamps and other 12 volt DC appliances as shown in Figure 5. The battery life is compromised by unregulated current charging. Available appliances are limited for 12 volt DC power, because wire resistance limits power to a few hundred watts. This system is not connected to AC power lines and is considered to be “off the grid”.


FIGURE 5: LOG CABIN SYSTEM

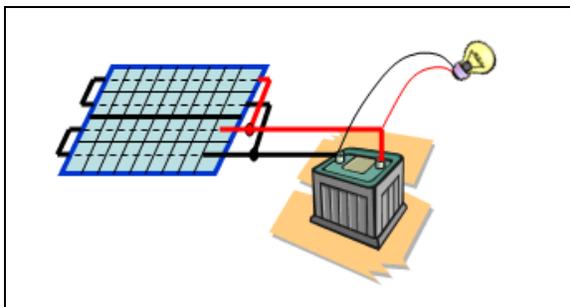

Country Home System – Larger panels providing 24-96 volts are connected to an inverter to yield 120/240 VAC to operate standard lighting and appliances as shown in Figure 6. Battery life is improved with a regulated charging module. The higher DC voltages

support moderate power levels. This system is not connected to AC power lines and is considered to be “off the grid”.


FIGURE 6: COUNTRY HOME SYSTEM

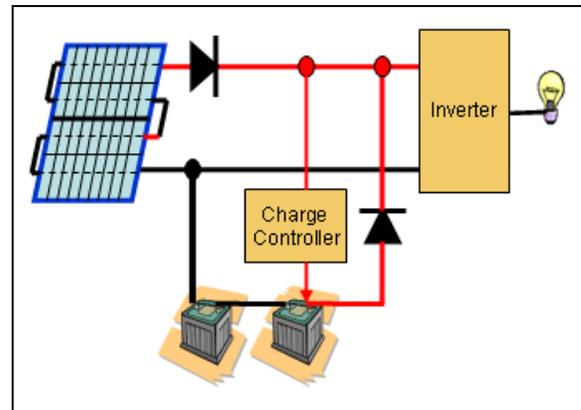

Urban Home System – Larger panels providing 200-400 volts are connected to an inverter to yield 120/240 VAC at medium power levels (2-10kW). This system is connected to AC power lines (i.e., connected to the grid) as shown in Figure 7. The customer sells power to the power company during the day and buys power from the power company during the night. The grid-connected approach eliminates expensive and short-lived batteries.

A couple of issues exist with this system. One, the inverter has potential as a single point of failure; and two, non-optimal power harvesting from the solar panels, especially in partial shading conditions.

FIGURE 7: URBAN HOME SYSTEM

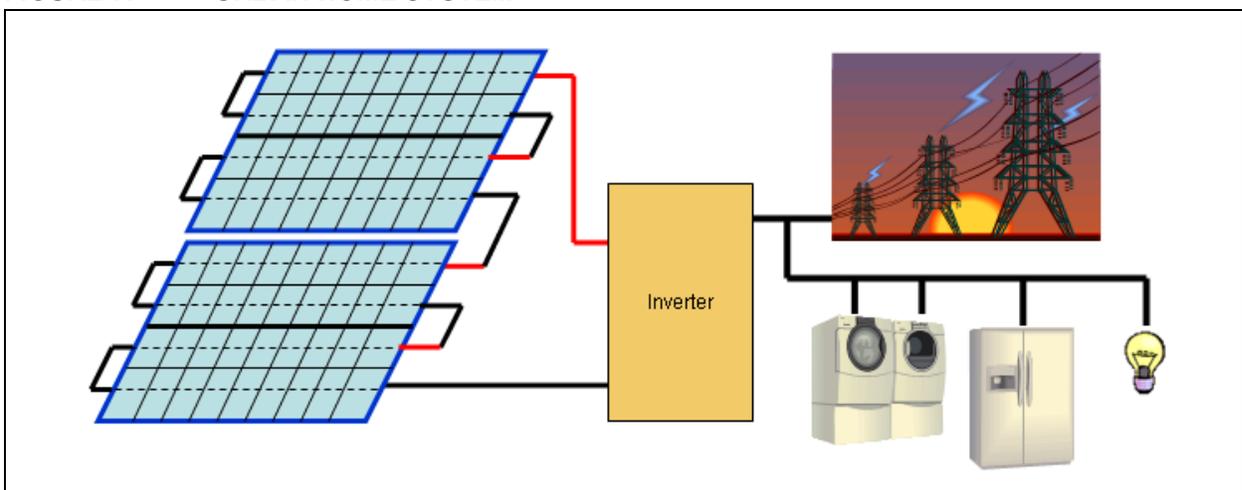


AN1338

Single Inverter with Multiple DC/DC Converters –

The use of DC/DC converters per string provides enhanced power harvesting from solar panels as shown in Figure 8. The DC/DC converters may be separate modules or reside within the inverter module.


This method is still susceptible to single-point-failure of the inverter, and involves the distribution of high voltage DC power – a potentially dangerous situation because direct current power fusing is difficult to achieve.

FIGURE 8: SINGLE INVERTER WITH MULTIPLE DC/DC

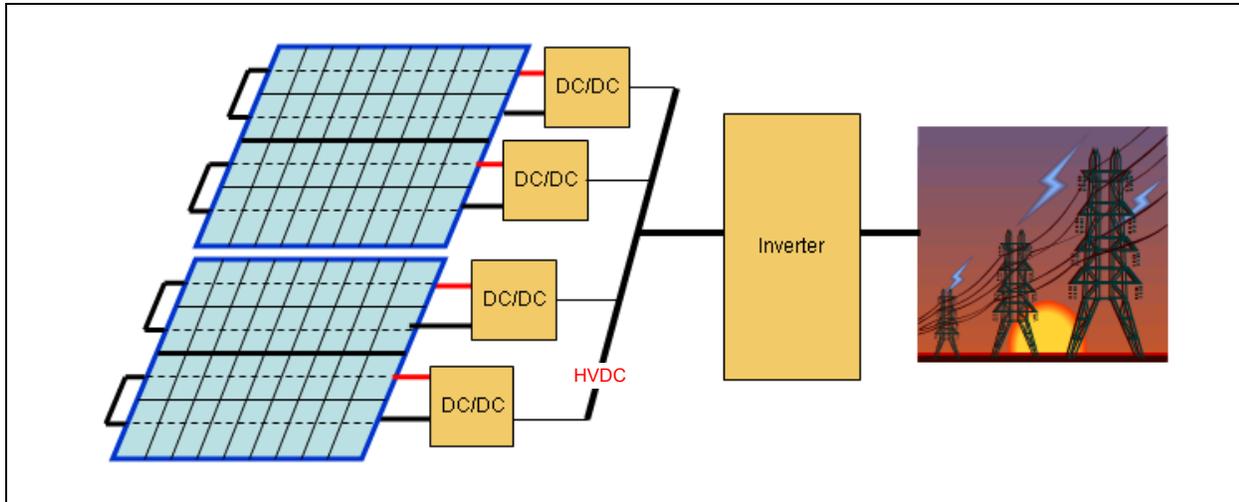

Urban Home System with String Inverters - Panels providing 200-400 volts are connected to multiple inverters to yield 120/240 VAC at medium power levels (2-10 kW). The inverters are connected to the grid as shown in Figure 9. Use of multiple inverters provides enhanced power harvesting from solar panels and also provides enhanced system reliability.


FIGURE 9: URBAN HOME SYSTEM WITH STRING INVERTERS

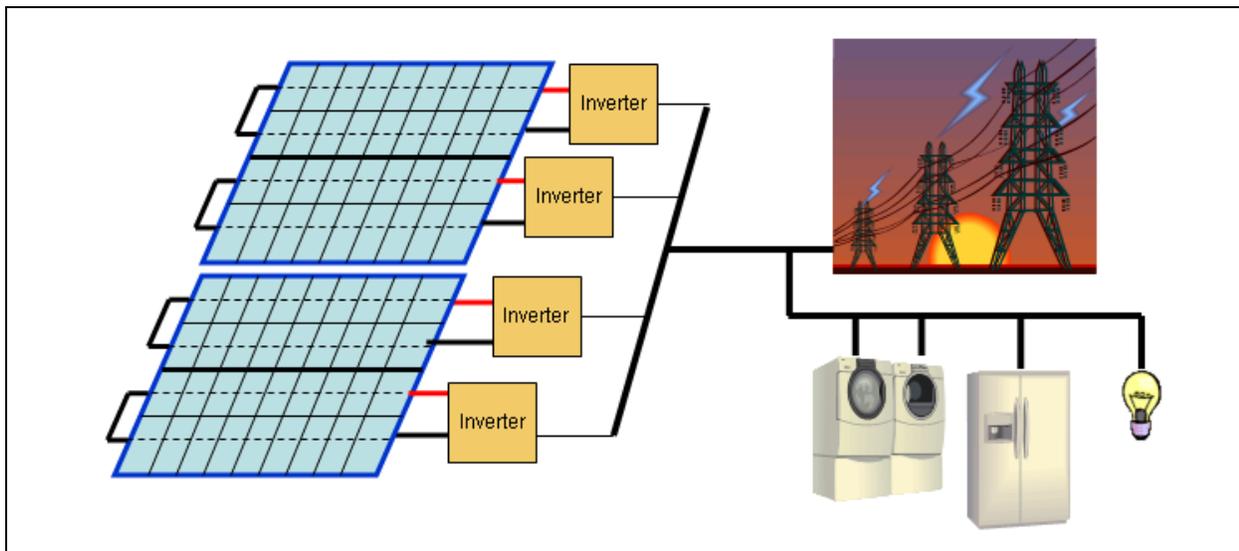

Module Incorporated Inverters – Each solar panel module incorporates its own inverter. Module-incorporated inverters are also known as microinverters. A microinverter system is shown in Figure 10.

The incorporation of inverters into the solar panels greatly reduces installation labor costs, improves safety, and maximizes the solar energy harvest.

FIGURE 10: MODULE INCORPORATED INVERTERS (MICROINVERTERS)

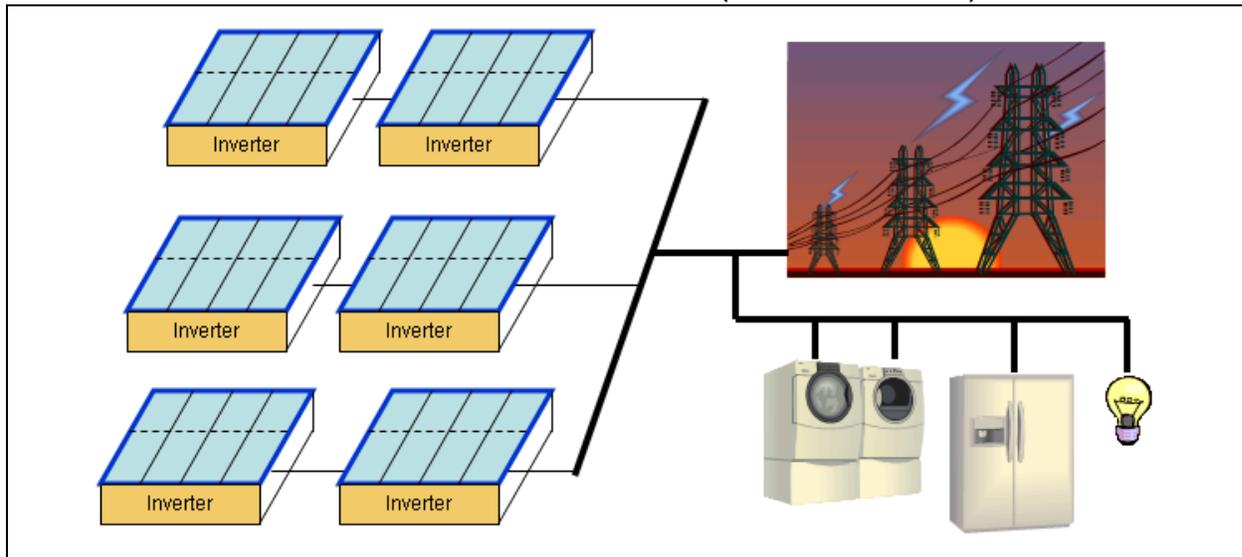

Why a Microinverter?

- Moving from centralized inverters to distributed inverters optimizes the energy harvest.
- Incorporating converters into the solar panel modules reduces installation costs.
- Improves system reliability from 5 to 20 years by reducing converter temperatures and removing fans.
- Replacing hard-switching techniques with soft-switching improves efficiency and reduces heat dissipation.
- Standardized designs (hardware and software) improve reliability and reduce costs – from cottage industry to mass production.
- Eliminates electrolytic capacitors (due to high failure rate) – designs require higher voltages to reduce current, which allows use of lower capacitance non-electrolytic capacitors.
- Converters that are tied to the grid eliminate the need for batteries in many applications. Batteries are very expensive, require maintenance, and are short-lived.
- Microinverters tend to be lower powered (only a few hundred watts), which tends to lower internal temperatures and improve reliability.
- Microinverter solar systems require many inverters to handle a specific power level – driving up production quantities, which reduces cost.


Solar Microinverter Requirements

- Maximum Power Point Tracking (MPPT) algorithm is required to optimize the power harvest from solar panels
- System efficiency: Greater than 94%
- Wide DC input voltage range
- Cost per Watt: \$0.20 to \$0.50 USD in production quantities
- Safety: Fault detection and anti-islanding
- AC quality, Total Harmonic Distortion (THD) <5%: meets IEEE 519 standard

GRID-CONNECTED SOLAR MICROINVERTER SYSTEM


A general structure of a grid-connected solar microinverter system is shown in Figure 11.

FIGURE 11: GRID-CONNECTED SOLAR MICROINVERTER SYSTEM

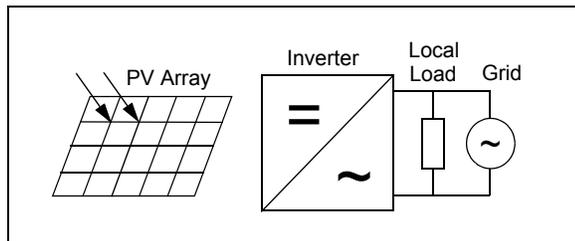

A buck-derived full-bridge inverter shown in Figure 12 is used in grid-connected solar microinverter systems. This configuration does not have the flexibility of handling a wide range of input PV voltage, and requires heavy line frequency step-up transformers.


FIGURE 12: SINGLE-STAGE FULL-BRIDGE INVERTER

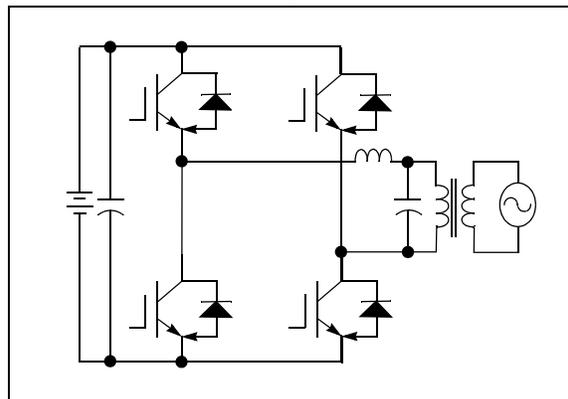

To accommodate a large input voltage range, the two-stage topology is generally used, as shown in Figure 13.

The first stages of the inverter system boost the low voltage of the PV panel to high voltage DC with or without isolation. The topology used in the first stage can be simple boost, push-pull or full-bridge. The second stage of the converter produces sinusoidal output voltage and current in synchronization with the grid voltage. The general topology used for this stage is full-bridge and half-bridge. The two-stage topology makes the system costly and complicated, especially for a single PV panel system. To make the system simple, the high efficiency and reduced cost single-stage topology is used.

FIGURE 13: TWO-STAGE TOPOLOGY FOR SOLAR MICROINVERTER SYSTEM

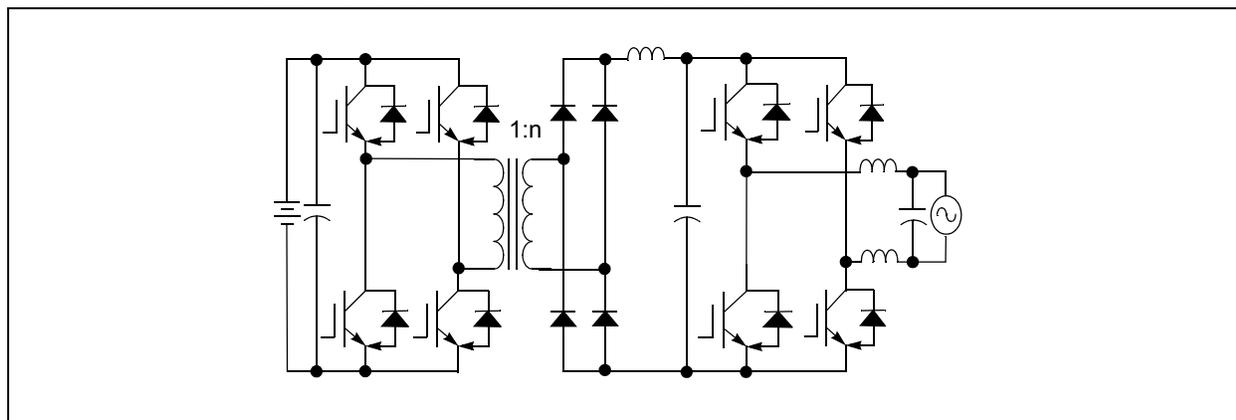

GRID-CONNECTED SOLAR MICROINVERTER REFERENCE DESIGN

The reference design in this application note describes a single-stage grid-connected solar (PV) microinverter. A simple flyback converter is used to achieve sinusoidal output voltage and current that is in phase and in synch with the grid. This microinverter has been designed to connect any PV module having maximum power rated up to 220 watt with input voltage range of 25 VDC to 45 VDC, and a maximum open circuit voltage of 55V.

The specifications of the reference designs are as follows.

110V Solar Microinverter System

- Maximum output power: 185 watt
- Nominal output voltage: 110V
- Nominal output current: 1.7A
- Output voltage range: 90 VAC-140 VAC
- Output frequency nominal frequency: 60 Hz


- Output frequency range: 57 Hz-63 Hz
- Power factor: Greater than 0.95
- Total harmonic distortion: Less than 5%
- Efficiency
 - Peak efficiency: 93%
 - Maximum Power Point tracking: 99%

220V Solar Microinverter System

- Maximum output power: 185 watt
- Nominal output voltage: 220V
- Nominal output current: 0.8A
- Output voltage range: 180 VAC-264 VAC
- Output frequency nominal frequency: 50 Hz
- Output frequency range: 47 Hz-53 Hz
- Power factor: Greater than 0.95
- Total harmonic distortion: Less than 5%
- Efficiency
 - Peak efficiency: 94%
 - Maximum Power Point tracking: 99%

A block diagram of the grid-connected solar microinverter reference design is shown in [Figure 14](#).

FIGURE 14: SOLAR MICROINVERTER REFERENCE DESIGN BLOCK DIAGRAM

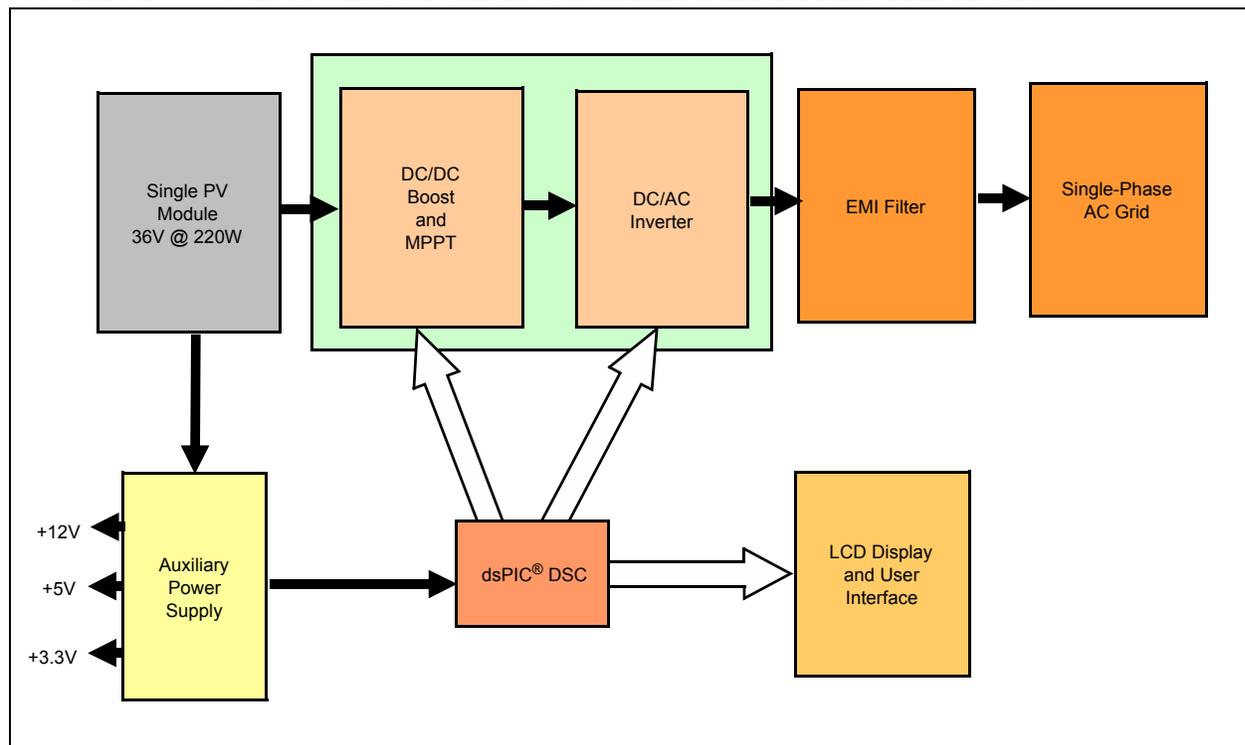

AN1338

The PV panel output is converted to sinusoidal output current and voltage in phase with the grid. An Electromagnetic Interference/Electromagnetic Capability (EMI/EMC) filter is used to suppress the EMI/EMC noise and provide impedance between inverter output and the grid. The auxiliary power for the controller and all feedback circuit is derived from the PV panel voltage. A single Microchip dsPIC33F 'GS' series device (dsPIC33FJ16GS504) is used to control power flow from the PV panel to the grid. The dsPIC DSC also executes the MPPT algorithm, fault control, and optional digital communication routines.

Due to the life span of a PV panel, which is typically 25 years, two key requirements of the solar microinverter reference design are high efficiency and reliability. The electrolytic capacitor used for power decoupling between the PV module and the single-phase grid is the main limiting component inside the inverter. The operational lifetime of electrolytic capacitors provided by most manufacturers varies from 5000 hours to 10000 hours.

Equation 1 determines the expected life span of the electrolytic capacitors.

EQUATION 1:

$$L = L_b \cdot 2^{\left(\frac{T_0 - T_h}{10}\right)}$$

Where,

L = operation lifetime

L_b = base lifetime at rated temperature


T_0 = rated temperature

T_h = hotspot temperature

The ripple current in the electrolytic capacitor produces heat, which causes a rise in temperature. The ratio of operating ripple current RMS to rated ripple current RMS also affects the life of the capacitor.


The Grid-Connected Solar Microinverter Reference Design uses an interleaved flyback converter, as shown in Figure 15.

FIGURE 15: INTERLEAVED FLYBACK CONVERTER

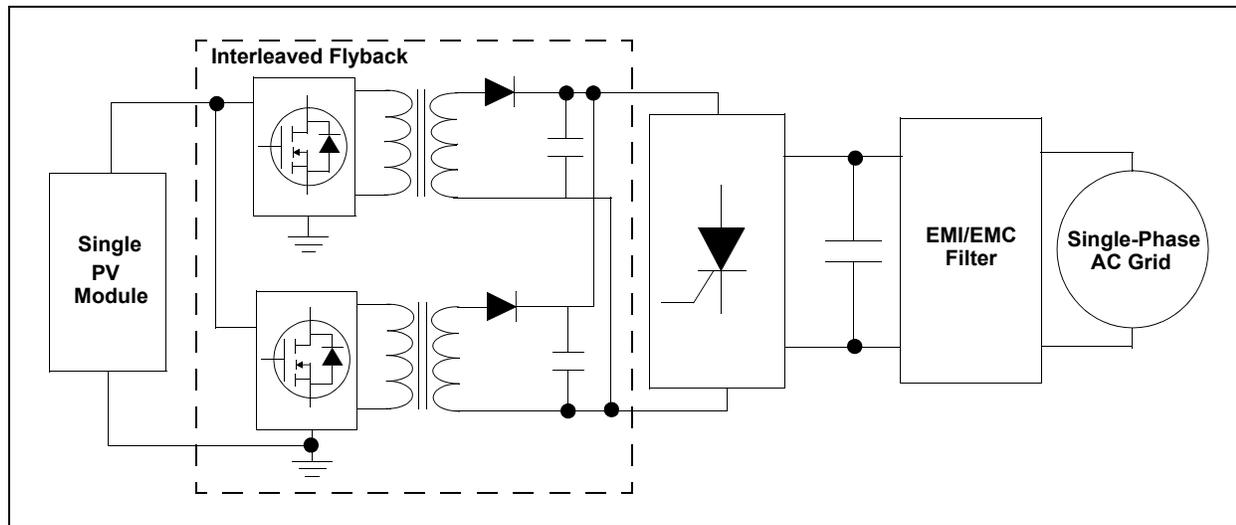

The interleaved flyback converter reduces the ripple current RMS through the input bulk electrolytic capacitor, which increases the life of the capacitor. Output current ripple also reduces by interleaving action resulting in low output current THD. The input and output current waveform of the interleaved flyback converter at 50% duty cycle operation of the flyback MOSFET is shown in Figure 16.

FIGURE 16: CURRENT AND VOLTAGE WAVEFORM OF INTERLEAVED FLYBACK CONVERTER

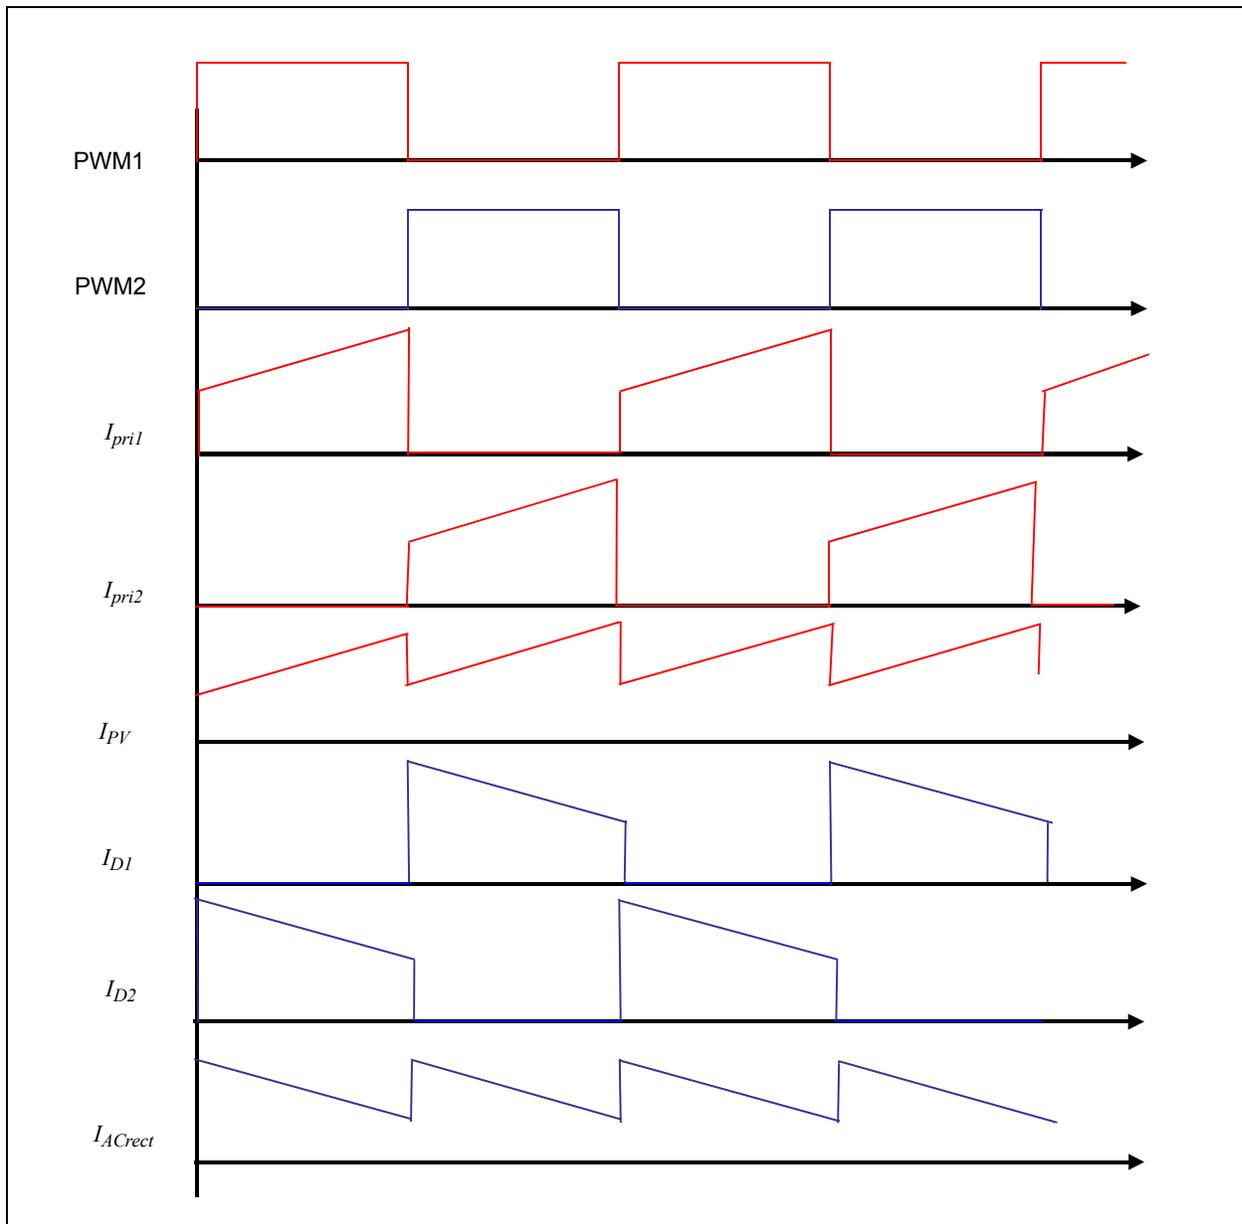

AN1338

Listing of I/O Signals for Each Block, Type of Signal, and Expected Signal Levels

The block diagram in Figure 17 illustrates measurement of the grid voltage required for Phase-Locked Loop (PLL), output current control, and system islanding. The inverter output voltage measurement is required for synchronization inverter output to grid voltage and system islanding.

The grid current is measured to make sure the inverter supplies the sinusoidal current in phase with the grid. PV voltage and flyback MOSFET current is measured for MPP detection. In addition, two MOSFET currents are measured for load balancing of both converters.

FIGURE 17: SOLAR MICROINVERTER RESOURCES

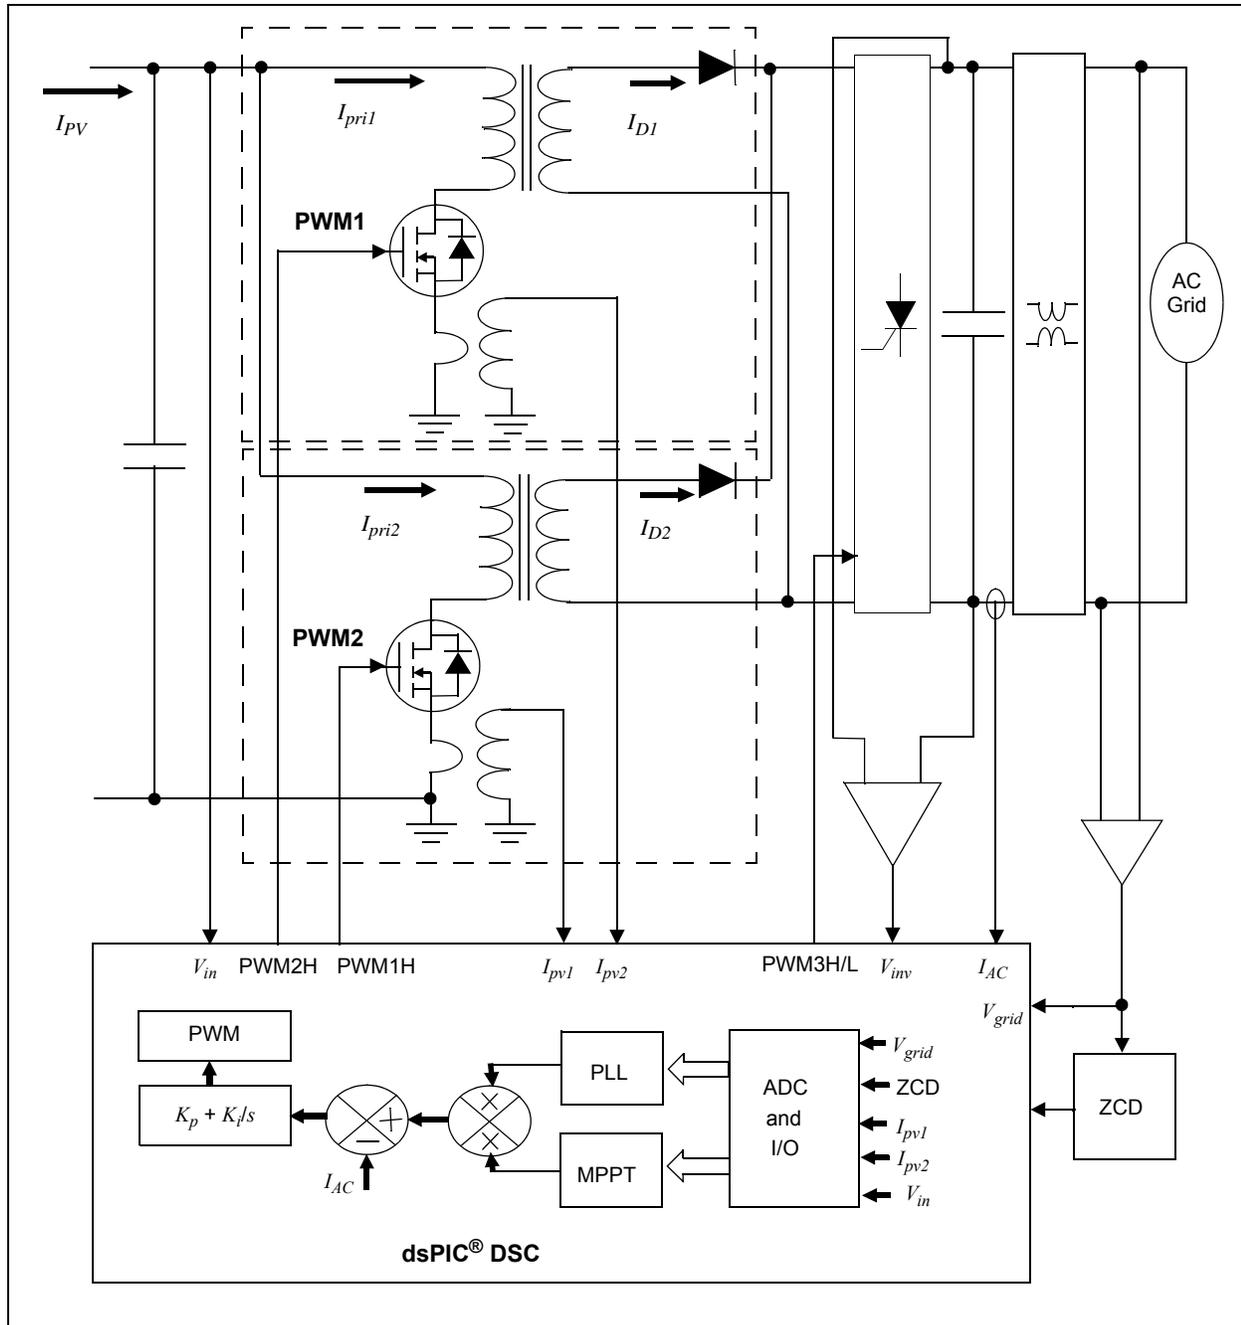


Table 1 provides the resources required for a digital solar microinverter design.

TABLE 1: REQUIRED RESOURCES FOR DIGITAL SOLAR MICROINVERTER DESIGN

Signal Name	Type of Signal	dsPIC® DSC Resources
V_{pv}	Analog	AN1
I_{pv1}	Analog	AN0
I_{pv2}	Analog	AN2
V_{inv}	Analog	AN3
V_{grid}	Analog	AN4
I_{AC}	Analog	AN5
Flyback MOSFET Gate Drive	Digital	PWM1H, PWM2H
Flyback Active Clamp MOSFET Gate Drive	Digital	PWM1L, PWM2L
Vac_Zero_Cross	Zero-Crossing Detect, Digital	RB15

Microinverter Circuit Operation

The DC input from the PV module is fed to the flyback primary. A modulated high-frequency sine PWM is used for the flyback MOSFET to generate the rectified sine output voltage/current across the flyback output capacitor. The two flyback converters are operated 180 degrees out of phase to accomplish interleaving operation. The flyback topology operates in two modes.

- **Mode 1:** When the flyback MOSFETs (Q7/Q8) turn ON, energy is stored on the primary of the flyback transformers (TX5/TX6). The diodes (D1/D2) are in a blocking state, as voltage applied across the diode is reverse-biased from the transformer secondary winding. During this time, the flyback transformer behaves like an inductor and the primary current (I_{pri1}/I_{pri2}) of the transformers (TX5/TX6) rises linearly as shown in Figure 16. Load current is supplied by the output capacitor.
- **Mode 2:** When the flyback MOSFET turns OFF, the voltage applied across the primary winding is reversed, producing the secondary winding's voltage, which forward biases the output diodes (D1/D2). The stored energy in the primary is transferred to the secondary, which charges the output capacitor and supplies current to the load. During this time, output voltage is applied directly across the transformer secondary winding and subsequently the diode current decreases linearly, as shown in Figure 16.

The snubber circuit diodes (D18/D17), capacitors (C19, and C15/C11, C12) and active clamp circuit MOSFET (Q2/Q1) and capacitors (C13, C14/C9, C19) are used to clamp the flyback primary MOSFETs (Q7/Q8) voltage to a safe value. When the MOSFETs turn OFF, voltage applied across the drain to source (V_{ds}) will be a summation of input voltage, clamp voltage across, and leakage spikes voltage due to transformer leakage inductance.

A modulated sine PWM generates modulated sine primary MOSFET current, producing the diode secondary current, as shown in Figure 18. The average of the sine modulated secondary diode current produces a rectified sine voltage/current across the output capacitor.

An SCR full-bridge is used to unfold the rectified output voltage/current to a sinusoidal voltage/current. Therefore, the SCR is switched at line frequency. The output of the inverter is synchronized with the grid by a digital PLL. The MPPT controls the magnitude/rms of the output current. The shape of the output current is controlled by current control loop. Sine modulated PWM operation of the flyback MOSFETs transfers the packet of energy to the inverter output capacitor. I_{pri1} is the flyback1 converter MOSFET current and I_{sec1} is the flyback1 output diode current.

The secondary diode current (I_{sec1}) is filtered by the flyback output capacitor and produces sinusoidal output voltage across the output capacitor.

Figure 19 shows the input solar microinverter voltage and PV inverter output voltage/current waveform before the SCR full-bridge. Figure 20 shows the solar microinverter output voltage/current waveform and its unfolded voltage/current waveform after the SCR full-bridge.

AN1338

FIGURE 18: SINE-MODULATED PRIMARY MOSFET AND SECONDARY DIODE CURRENT

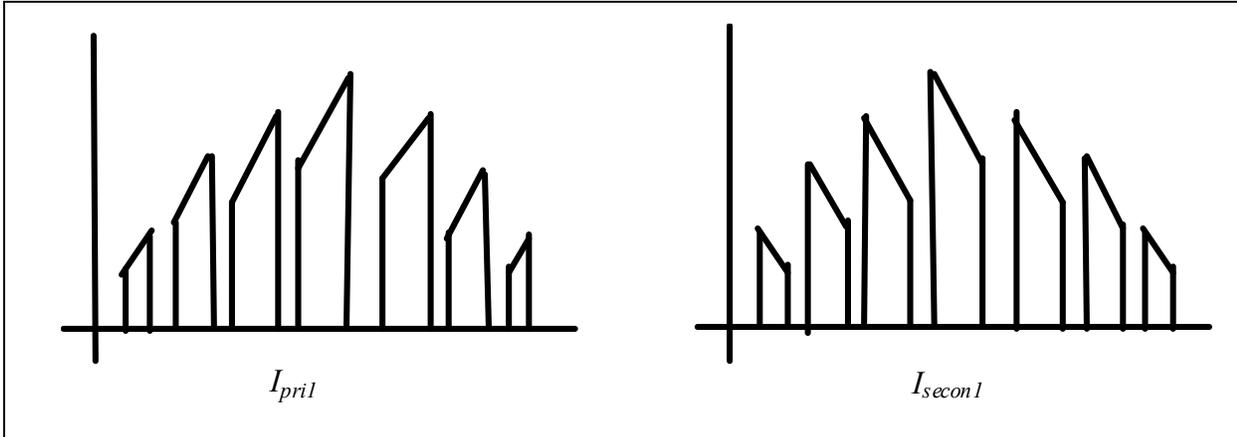


FIGURE 19: FLYBACK I/O VOLTAGE/CURRENT WAVEFORM


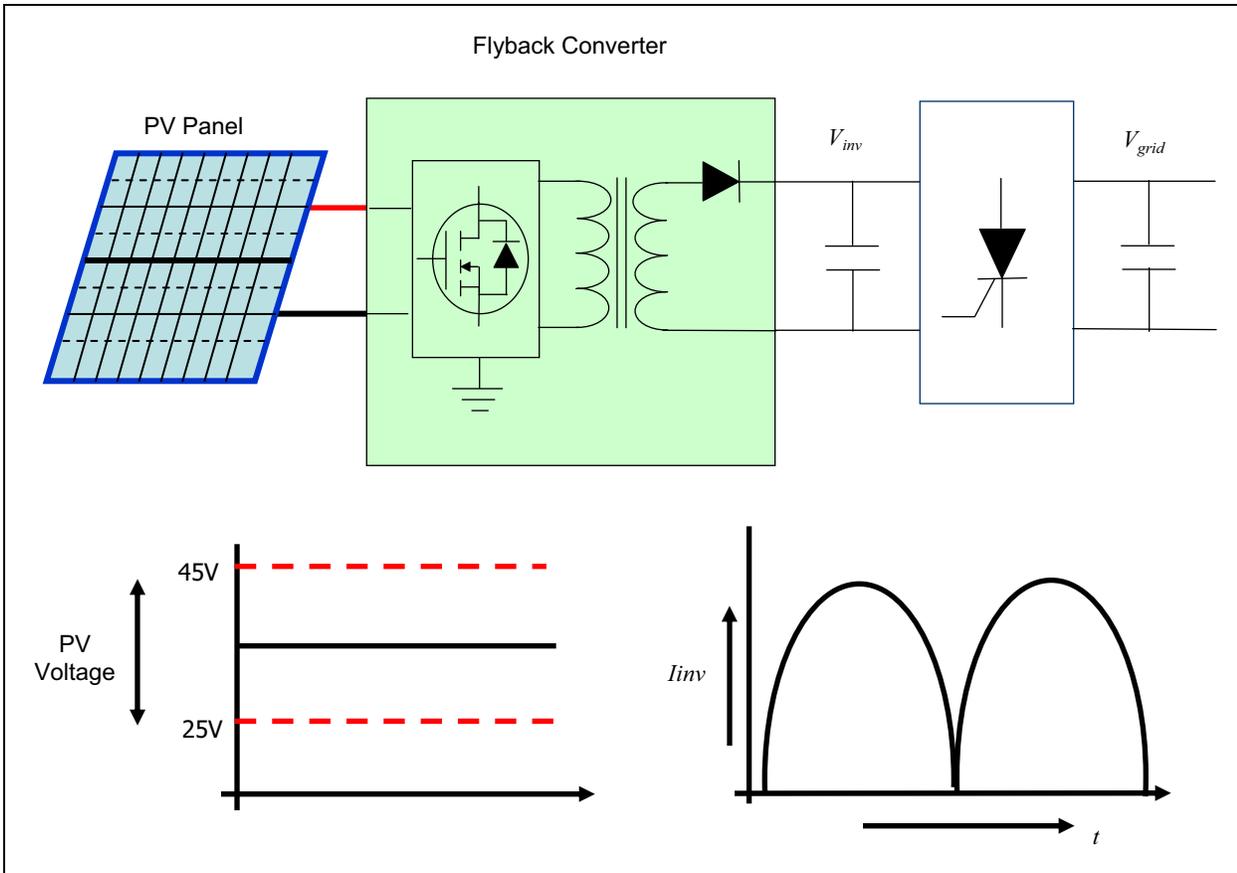


FIGURE 20: SCR BRIDGE I/O VOLTAGE/CURRENT WAVEFORM

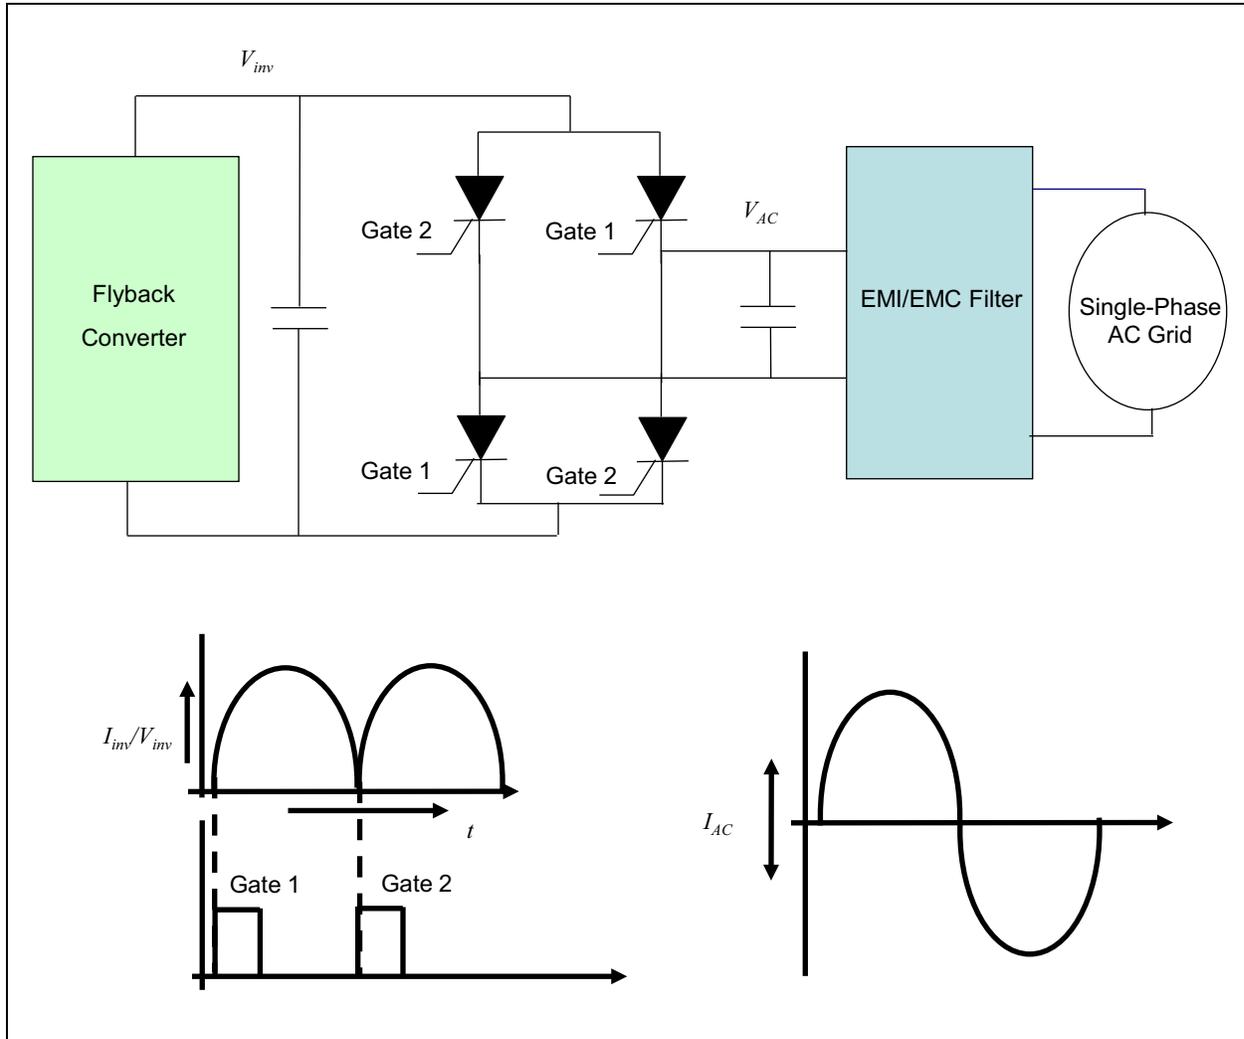

AN1338

The main specification of the grid-connected solar microinverter is that current must be drawn from the PV panel and delivered to the utility grid at unity power factor.

Consider the grid-connected microinverter of [Figure 19](#) and [Figure 20](#) where:

- V_{AC} is the fundamental component of the inverter output
- V_L is the voltage drop across the link inductor (EMI inductor)
- V_{grid} is the utility grid voltage waveform


Assuming that the losses are negligible, it can be observed that $V_{AC} = V_{grid} + V_L$, where all variables are vectors in the form of $v = V \cdot e^{j\omega t}$. Based on this, V_{AC} is then calculated, as shown in [Equation 2](#).

EQUATION 2:

$$V_{AC} = V_{grid} + j \cdot \omega \cdot L \cdot I_{AC}$$

To achieve the unity Power Factor condition, the current waveform must be in phase from the utility voltage waveform. [Figure 21](#) shows how this waveform appears in vector form.

FIGURE 21: VECTOR WAVEFORM

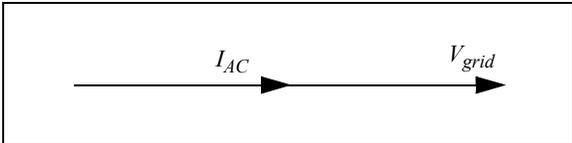


The key to controlling this operation is the inverter voltage variable, V_{AC} . From [Equation 2](#), I_{AC} can be expressed, as shown in [Equation 3](#).

EQUATION 3:

$$I_{AC} = \frac{V_{AC} - V_{grid}}{j \cdot \omega \cdot L}$$

[Figure 22](#) shows I_{AC} when drawn as a phasor.

FIGURE 22: MAGNITUDE AND PHASE REQUIREMENT OF INVERTER OUTPUT VOLTAGE

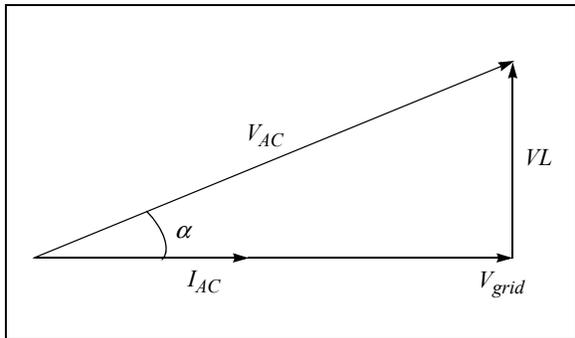

The phasor in [Figure 22](#) shows that the magnitude and direction of current flow (and therefore power flow), can be controlled by the phase shift α and the magnitude of the inverter output voltage waveform.

HARDWARE DESIGN

A flyback inverter needs to convert wide input PV panel voltage into rectified high-voltage AC. The instantaneous rectified output voltage should be greater than the instantaneous grid voltage to feed the sinusoidal current to infinite voltage source (i.e., the grid). The transformer turns ratio is utilized to boost the low DC voltage to high voltage. The design specifications used in the flyback inverter are as follows:

- Input voltage range: 25-45 VDC
- Rectified output voltage peak range: 120-210V
- Continuous power: 185 Watt
- Switching frequency: 114 kHz

The flyback converter should be able to boost the minimum available PV voltage (25 VDC) to maximum peak grid voltage (210V). The converter is designed to operate at a maximum of 62% of the PWM duty cycle. The input and output voltage relationship on the flyback converter is expressed by [Equation 4](#).

EQUATION 4:

$$V_{rectified} = \frac{V_{inmin} \cdot N \cdot Duty_{max}}{(1 - Duty_{max})}$$

Where,

$V_{rectified}$ = inverter output voltage

V_{inmin} = minimum input voltage

N = transformer turns ratio

$Duty_{max}$ = maximum duty cycle of the flyback MOSFET

For a V_{inmin} of 22 VDC and a $V_{rectified}$ of 210V with a maximum duty cycle of 0.62, the turns ratio of the transformer should be $N \approx 6$.

Flyback MOSFET

When choosing the MOSFETs, the following must be considered:

- Maximum Breakdown Voltage
- Continuous Current
- Peak Current
- Package Thermal Performance

Maximum Breakdown Voltage

In Flyback configuration the maximum voltage applied across the MOSFET is expressed by [Equation 5](#).

EQUATION 5:

$$V_{ds} = V_{in} + V_{reflected} + V_{leakage}$$

Where,

V_{ds} = voltage applied across the drain and source of the MOSFET

V_{in} = input voltage of 25-45 VDC

$V_{reflected}$ = output reflected voltage applied across the transformer primary when the output diode turns ON

$V_{leakage}$ = leakage spike voltage due to transformer leakage magnetizing inductance

The maximum output voltage will be equal to the peak of the maximum grid voltage, which is 210V. The maximum reflected voltage at the peak of maximum grid voltage is expressed by [Equation 6](#).

EQUATION 6:

$$V_{reflected} = \frac{210}{6} = 35$$

Leakage voltage depends on leakage inductance of the transformer. The expected leakage voltage spike is 30V to 35V at full load condition. Therefore, the drain-to-source voltage across the MOSFET at $V_{inmax} = 55V$ and maximum grid voltage is calculated, as shown in [Equation 7](#).

EQUATION 7:

$$V_{ds} = 55 + 35 + 35 = 125V$$

Continuous Current

The MOSFETs should be able to handle maximum continuous and peak current during extreme conditions. As the flyback MOSFET duty is sine modulated its current will be sine profile. At V_{imin} , the maximum input average current will be 9 amps. The maximum input current will be $9/Duty_{max}$, which equals 14.5 amps. Therefore, the peak of the sine modulated input current will be $14.5 * 1.414 = 20.53$ Amps. As input current rises linearly when the MOSFET turns ON, the MOSFET current will have peak-to-peak ripple current on top of its peak current. The maximum peak-to-peak current is chosen 20% of the input peak current. Therefore, the peak current across the MOSFET is expressed by [Equation 8](#).

EQUATION 8:

$$I_{peakmax} = 20.53 + 20.53 \cdot \frac{0.2}{2}$$

In the interleaved flyback converter this current will be divided into two MOSFETs. Therefore, each MOSFET will have maximum peak current of ~11.5 Amps.

Package Thermal Performance

A MOSFET should be selected with low Rds(on) to reduce the conduction losses in the MOSFET. A MOSFET with an Rds(on) less than 20 mOHM is a good choice. The gate switching losses depend on the total gate charge of the MOSFET. Therefore, the MOSFET should have less than 100 nC for 114 kHz

switching. Based on the above parameter, the IRFS4321 has been selected. The IRFS4321 has a maximum of 15 mOHM Rds(on) and 110 nC maximum total gate charge.

Flyback Transformer

The flyback transformer has been designed using a ferrite transformer. The transformer design is based on using the area product ($W_a A_c$) approach and is designed to meet the following conditions:

- Minimum input voltage: $V_{imin} = 22V$
- Maximum DC link voltage: $V_o = 210V$
- Maximum output power: $P_{omax} = 185W$
- Primary rms current: $IP_{rms} = 10A$
- Maximum duty cycle: $D_{max} = 0.62$
- Switching frequency: $f = 114$ kHz

The manufacturer's data sheet was used to help select the appropriate material for the desired application. For the given range of materials, frequency, core loss, and maximum flux density of the material should be considered. From the research data, 3C90 material from FERROXCUBE was selected. From core loss, maximum flux density can be calculated, as shown in [Equation 9](#). The factors used in this equation are provided in [Table 2](#).

EQUATION 9:

$$P_l = a \cdot f^c \cdot B_{max}^d$$

TABLE 2: FACTORS APPLIED TO THE CORE LOSS EQUATION

Material	Frequency (f)	a	c	d
R, 35G, N87, 3C90	$f < 100$ kHz	0.074	1.43	2.85
	100 kHz $\leq f < 500$ kHz	0.036	1.64	2.68
	$f \geq 500$ kHz	0.014	1.84	2.28
P, 45G, N72, 3C85	$f < 100$ kHz	0.158	1.36	2.86
	100 kHz $\leq f < 500$ kHz	0.0434	1.63	2.62
	$f \geq 500$ kHz	7.36e-7	3.47	2.54
F, 25G, N41, 3C81	$f < 10$ kHz	0.790	1.06	2.85
	10 kHz $\leq f < 100$ kHz	0.0717	1.72	2.66
	100 kHz $\leq f < 500$ kHz	0.0573	1.66	2.68
	$f \geq 500$ kHz	0.0126	1.88	2.29

Core loss density is normally selected at approximately 250 mW/cm³. The calculated maximum flux density must be limited to less than half of β at saturation. This β level is chosen because the core will develop excessive temperature rise at this frequency when a flux density is close to saturation. Maximum flux density can now be calculated by [Equation 10](#).

EQUATION 10:

$$B_{max} = \left(\frac{P_l}{a \cdot \left(\frac{f}{1000}\right)^c} \right)^{\frac{1}{d}} = \left(\frac{150}{0.036 \cdot \left(\frac{172000}{1000}\right)^{1.64}} \right)^{\frac{1}{2.68}} = 960 G$$

To select the right size of the core, the area product of the core must be calculated using [Equation 11](#). This equation is derived from the equation for flux linkage ($\psi = N \cdot \phi$) and represents the power handling ability of the core. Therefore, each core has a number that is a product of its window area, W_a , and core cross-section area, A_c .

EQUATION 11:


$$W_a A_c = \frac{10^8 \cdot P_{omax}}{K_t \cdot \Delta B \cdot f \cdot J}$$

ΔB in [Equation 11](#) is equal to B_{max} core excitation as seen in [Figure 23](#). Current density of a winding is estimated to be 400 A/cm² and maximum output power P_{omax} is 185W. Therefore, the calculated area product can be determined using [Equation 12](#).

EQUATION 12:

$$W_a A_c = \frac{10^8 \cdot 195}{0.254 \cdot 960 \cdot 172000 \cdot 400} = 1.16 cm^4$$

FIGURE 23: HYSTERESIS LOOP OF MAGNETIC CORE

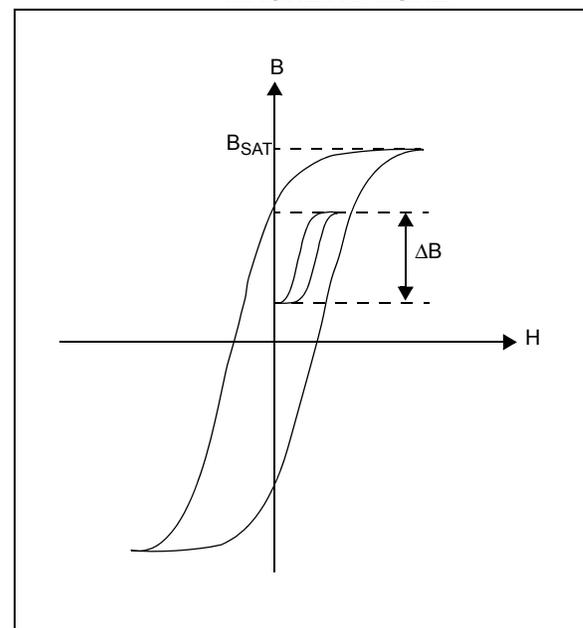

The selected core must have area product larger than calculated. Next, the RM14 shape and size of a core was selected. A size larger than needed was selected due to the primary and secondary windings that fit to the winding area of that core.

The primary turns are calculated using [Equation 13](#).

EQUATION 13:

$$N_p = \frac{10^8 \cdot V_{inmin} \cdot \left(\frac{1}{f}\right) \cdot D_{max}}{\Delta B \cdot A_c} = \frac{10^8 \cdot 22 \cdot \left(\frac{1}{172000}\right) \cdot 0.62}{960 \cdot 1.68} = 5$$

AN1338


To maintain the design margin we have chosen the number of primary turns = 6, with the secondary number of turns, N_s , expressed by Equation 14.

EQUATION 14:

$$N_s = N_p \cdot N = 6 \cdot 6 = 36$$

As primary current is very high, copper foil is used to reduce copper loss. In addition, to have 4 kV isolation from primary to secondary, triple insulated wire is used for the secondary winding. The winding diagram of the transformer is shown in Figure 24.

FIGURE 24: TRANSFORMER ELECTRICAL AND MECHANICAL CONSTRUCTION

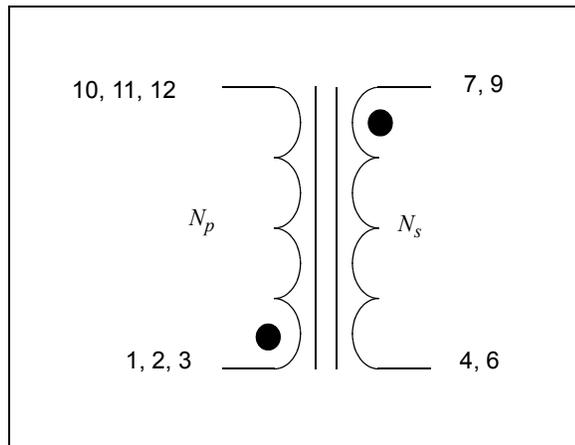

Output Rectifier Diode

A power diode requires a finite time to change from the blocking state to the conduction state and vice-versa. The time required to change its state, and how the diode current and voltage change during the transition period affects the circuit operation. The shape of the waveform (voltage and current) and transition time depends on diode intrinsic properties. When selecting diodes the following should be considered:

• Diode Breakdown Voltage

Transformer secondary voltage is calculated with $V_s = V_{inmax} \cdot N_s/N_p$, at highest PV module voltage $V_s = 55 \cdot 6 = 330V$, and maximum peak grid voltage $V_s = 145 \cdot 1.414 = 250V$. Therefore, the maximum voltage applied across the output rectifier diode will be $V_{br} = 330 + 205 = 535V$, because of transformer leakage inductance, and diode internal inductance voltage spikes that appear on diodes when switching. Due to this, the calculated breakdown voltage is increased by 30% and should be more than 700V.

• Average Forward Current

Average forward current per leg is easily calculated by Equation 15 from maximum output current at minimum grid voltage and continuous output power.

EQUATION 15:

$$I_{avg} = \frac{2 \cdot \sqrt{2} \cdot P_{output}}{\Pi \cdot V_{gridmin}} = \frac{537}{282} = 1.90$$

• Peak Forward Current

Peak current is calculated in Equation 16 using the transformer current ratio and peak MOSFET current.


EQUATION 16:

$$I_{pD} = I_p \cdot \frac{N_1}{N_2} = 11.5 \cdot 0.167 = 1.9167$$

• Switching Characteristics

Diode switching characteristics (see [Figure 25](#)) are determined by forward recovery time and reverse recovery time.

FIGURE 25: DIODE SWITCHING CHARACTERISTICS

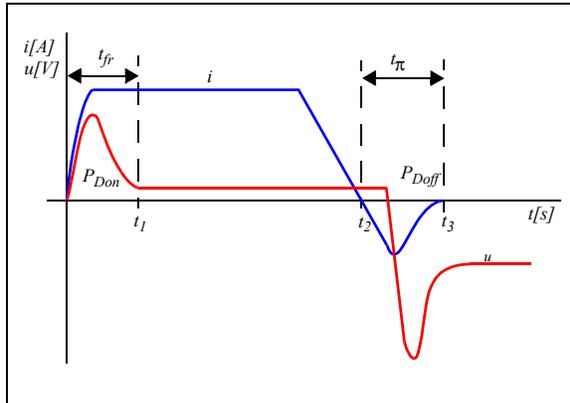

The diode switching loss can be estimated using [Equation 17](#).

EQUATION 17:

$$P_{swD} = Q_c \cdot V_{DC} \cdot f_{SW}$$

• Package Thermal Performance

For diodes, the isolated TO-220-2 package is used. Continuous working junction temperature should not exceed 130°C. Typical thermal junction to heat sink resistance of junction isolated TO-220-2 package is $R_{\Theta Jc} = 3.5^\circ\text{C/W}$ for maximum allowed power dissipation.

Total power loss in both diodes is estimated by adding conduction losses and switching losses, as expressed by [Equation 18](#).

EQUATION 18:

$$P_{tot} = P_{swD} + P_{fD} = 2W$$

The estimation shows that the power losses are within the set criteria.

Full-Bridge Thyristor

A thyristor is used in the full-bridge configuration to convert the inverter output voltage/current (rectified) to sinusoidal voltage/current. The maximum grid voltage of the SCR will be equal to the maximum grid voltage peak. Also, the average and peak current across the SCR will be equal to the grid current. The S8016N thyristor from Tecco Electronics was selected.

AUXILIARY POWER SUPPLY DESIGN

Design Specifications

The auxiliary power supply provides power, which is taken from the PV module input, to all of the on-board electronics.

The design specifications are:

- Input voltage: 15V-60V
- Output: 150 mA @ 3.3V, 200 mA @ 5V, 400 mA @ 12V

Because of a wide range of input voltage and power losses, a buck converter was used to generate 12V from the battery voltage. For 3.3V and 5V, linear regulators are used because of simplicity and price. All of the voltage regulators are connected in series; therefore, the 12V buck converter needs to deliver maximum 1A of current. For the buck converter, the LM5007 from National Semiconductor was used.


Signal Adaptation Block

The signal adaptation block consists of all of the electronic circuits (active and passive), which interfaces the dsPIC DSC to the power electronics circuits, such as MOSFET gate signals, analog currents and voltages sense, filters, and voltage dividers.

Flyback MOSFET Gate Drive Signal

The Microchip driver, MCP14E4, drives the flyback MOSFET gate signals: Q7g and Q8g (see [Figure 26](#)). PWM1H and PWM2H are the PWM drive signals for the flyback MOSFETs. A reverse diode is used across the gate drive resistor for fast MOSFET turn-off to reduce the turn-off switching losses.


FIGURE 26: FLYBACK MOSFET GATE DRIVE CIRCUIT

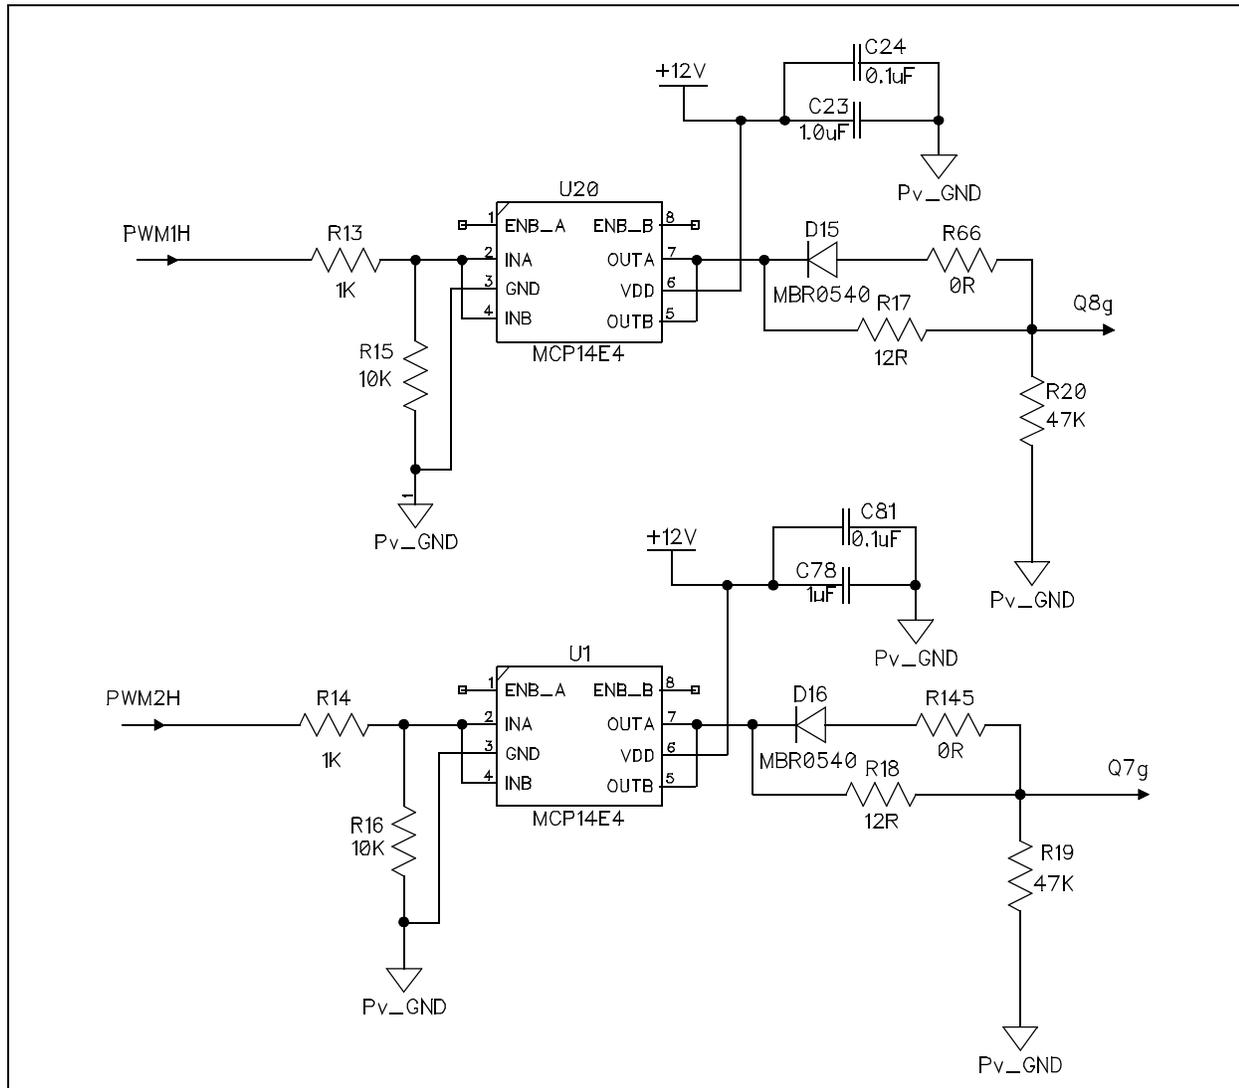

Active Clamp MOSFET Gate Drive Signal

The Microchip driver, TC4427, drives the active clamp MOSFETs gate signals: Q1G and Q2G (see [Figure 27](#)). PWM1L and PWM2L are the PWM drive signals for the active clamp MOSFETs. A reverse diode is used across the gate drive resistor for fast MOSFET turn-off to reduce the turn-off switching losses.

FIGURE 27: FLYBACK ACTIVE CLAMPED MOSFET GATE DRIVE CIRCUIT

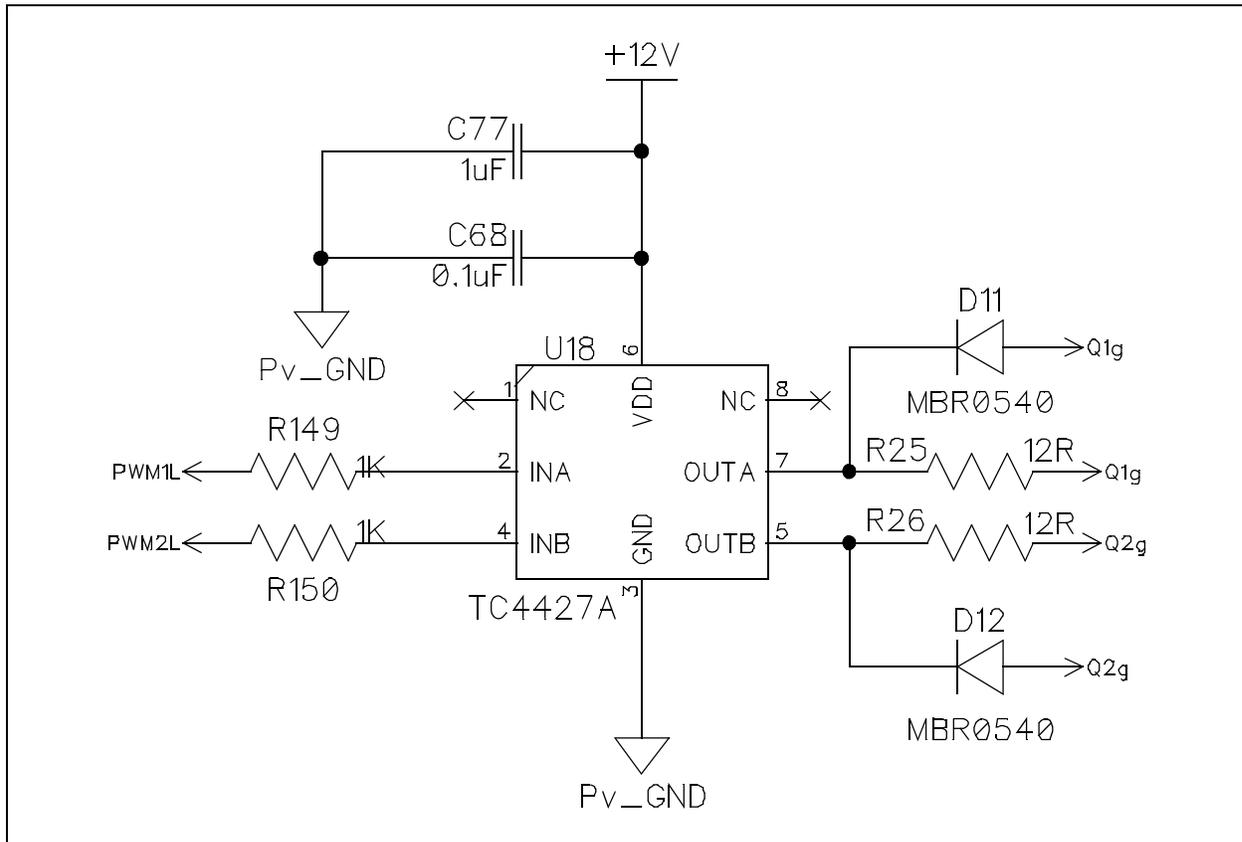


AN1338

SCR Gate Drive Signal

The MOC3052 opto-coupler-based gate driver drives the SCR bridge diodes D3, D4, D5 and D6. The MOC3052 SCR driver drives the high-side as well as the low-side SCR with opto-isolation of the gate drive signal (see [Figure 28](#)). PWM3H and PWM3L drive the SCR diodes.

FIGURE 28: SCR GATE DRIVE CIRCUIT

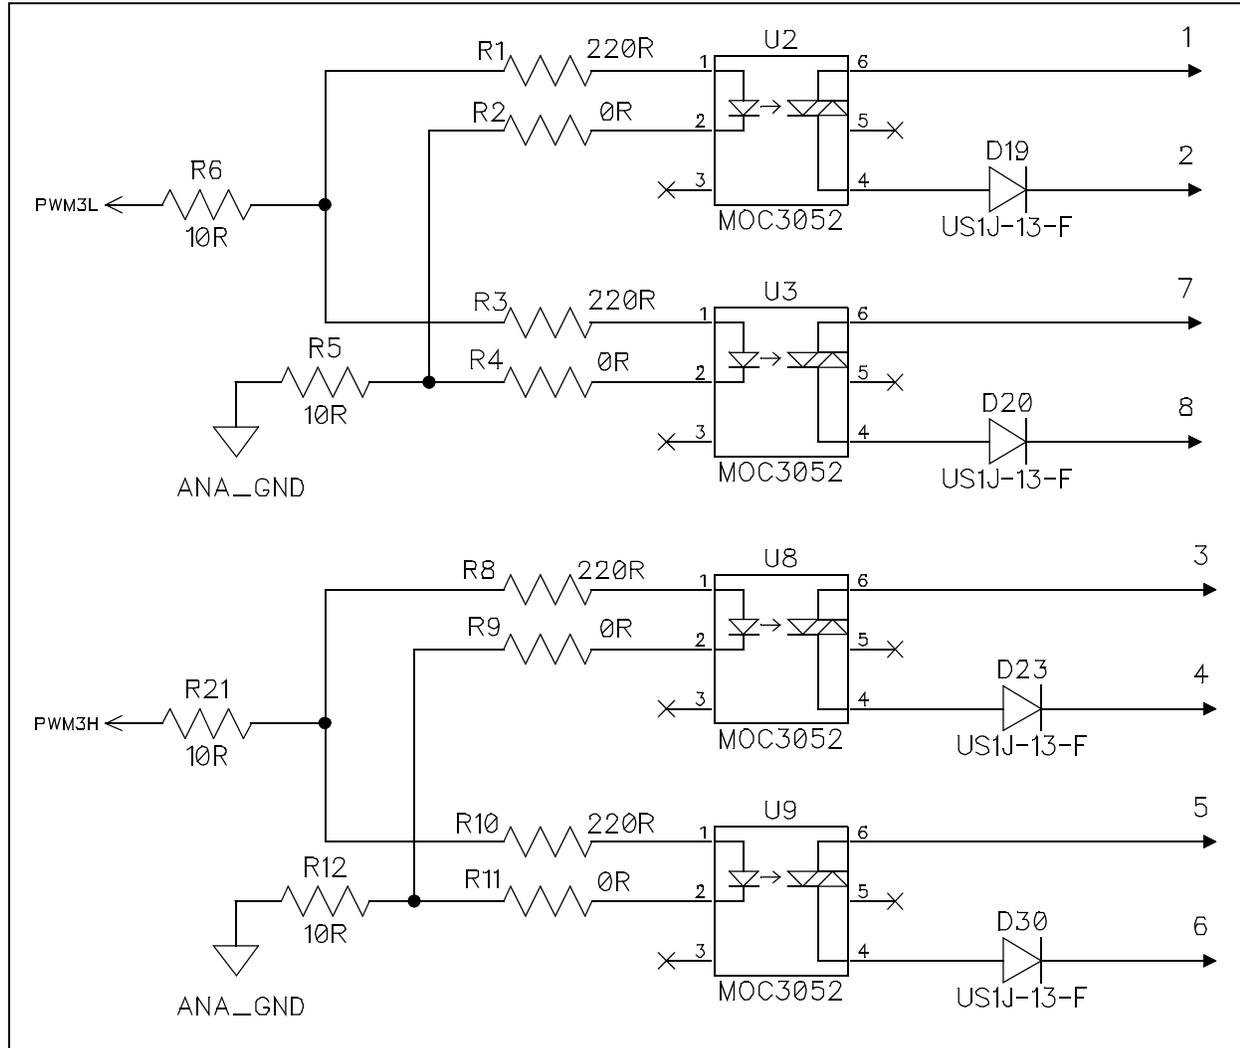

Voltage Measurement Techniques

- Resistive Divisor Voltage Measurement
- Differential Amplifier with Voltage Offset
- Zero-crossing Detect Circuit

RESISTIVE DIVISOR VOLTAGE MEASUREMENT

The PV panel voltage required for the control algorithm is scaled using the voltage divisor shown in [Figure 31](#).

The resistive divisor formed by R123 and R124 scales down the PV panel voltage to the ADC input voltage level, which is in the range of 0V to 3.3V.


[Equation 19](#) computes the gain of the voltage division.

EQUATION 19:

$$V_{ADC} = V_{PV} \cdot \frac{R_{124}}{(R_{124} + R_{123})}$$

The capacitors, C52 and C84, are used for the signal filtering, but their presence in the circuit is not mandatory. Similarly, the presence of the diode D9 is not mandatory. This diode provides protection if the voltage provided to an analog pin of the dsPIC DSC exceeds 3.3V.

FIGURE 31: VOLTAGE DIVISOR CIRCUIT

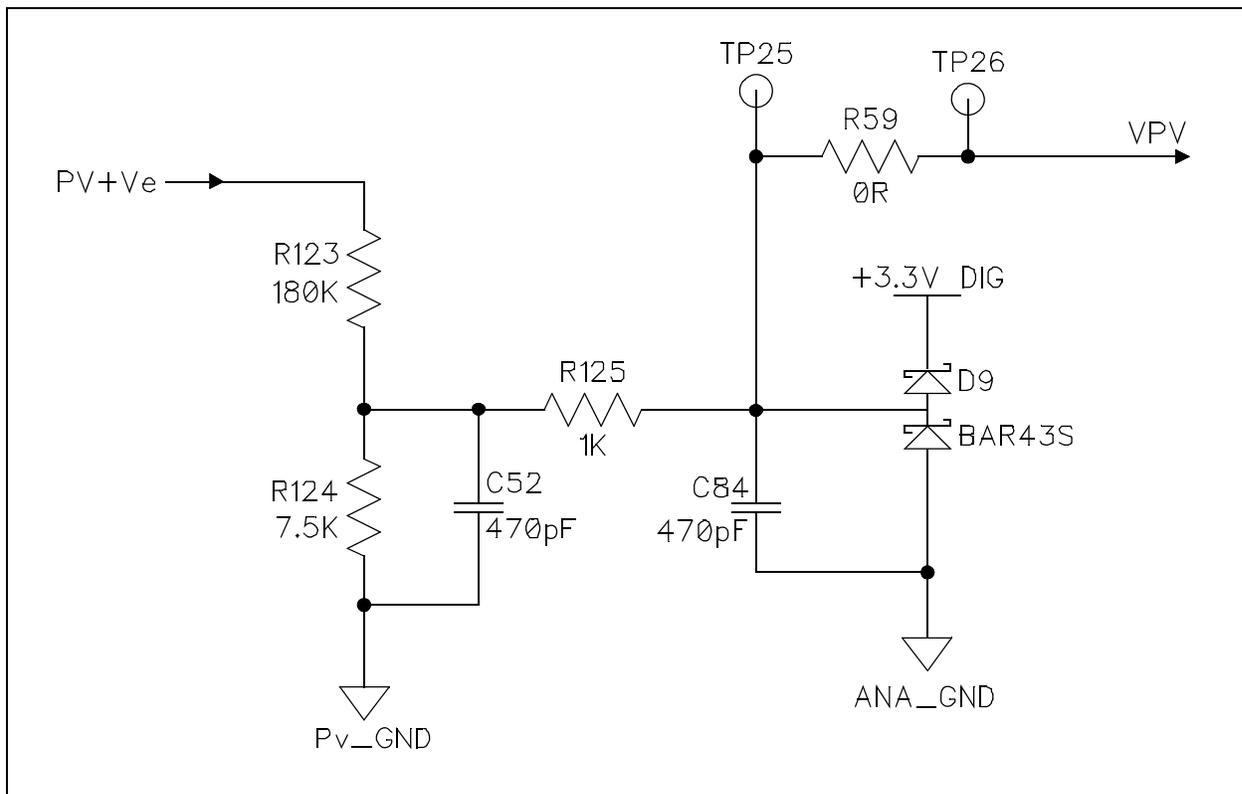


AN1338

DIFFERENTIAL AMPLIFIER WITH VOLTAGE OFFSET

The inverter output voltage and grid voltage are AC in nature, and cannot sense through a resistive divider network, because the ADC module of the dsPIC DSC can only measure a voltage signal range from 0V to 3.3V. High-voltage AC signals are deamplified and a 2.5V offset is added using a differential amplifier as shown in [Figure 32](#).

An offset of 2.5V makes the bidirectional AC sense voltage centered around this DC offset voltage. The resistor divider makes sure that the sense signal voltage varies from 0 to 3.3V with an offset of 1.65V at the analog pin of the dsPIC DSC, to effectively utilize the available voltage range of the ADC.

FIGURE 32: AC VOLTAGE SENSE CIRCUIT

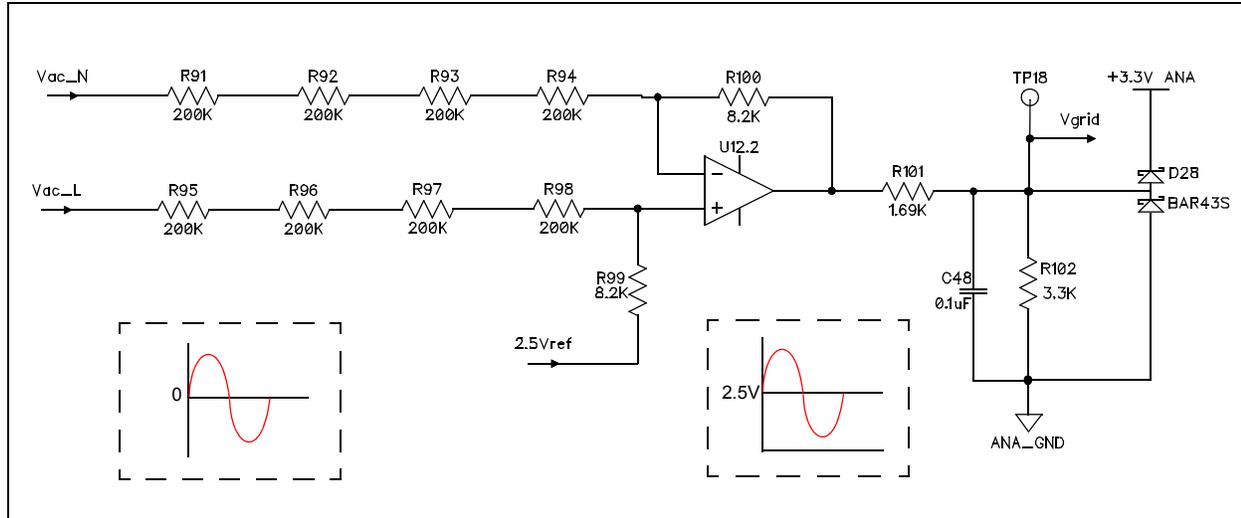

ZERO-CROSSING DETECT CIRCUIT


Inverter output should be in phase and in the same frequency as the grid voltage to feed current with a high power factor. A zero-cross detect circuit detects the grid voltage state and changes the dsPIC DSC port (Port B15) state accordingly.

As the grid voltage state changes from negative to positive, it changes the state of PORTB15 from low-to-high and vice-versa.

High voltage AC signals (grid voltage) are deamplified and an offset of 2.5V is added using the differential amplifier U11.1. The output of the differential amplifier U11.1 is compared with the 2.5V reference by comparator U11.2. The comparator U11.2 output drives the transistor Q5 base, as shown in Figure 33.

To avoid false triggering of the comparator, a hysteresis band of ~10 mV is added using R85, R86 and C46.

FIGURE 33: ZERO-CROSSING DETECT CIRCUIT

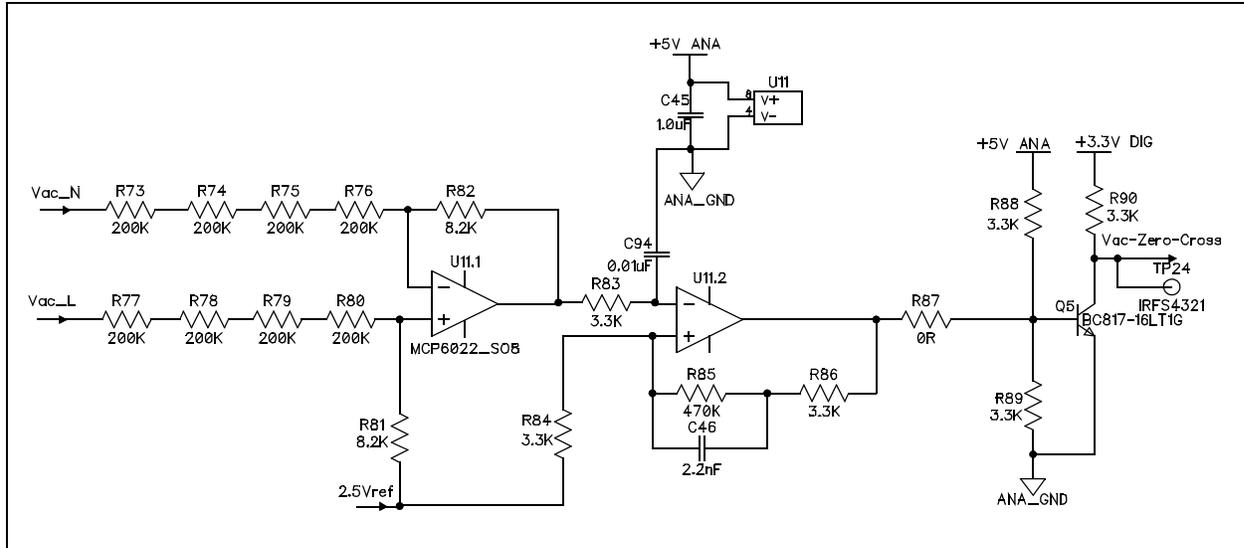

AN1338

SOFTWARE DESIGN

The Grid-Connected Solar Microinverter Reference Design is controlled by a single dsPIC DSC device, as shown in the system block diagram in Figure 34.

The dsPIC DSC device is the heart of the Solar Microinverter design and controls all critical operations of the system as well as the housekeeping operations. The functions of the dsPIC DSC can be broadly classified into the following categories:

- All power conversion algorithms
- Inverter state machine for the different modes of operation
- Maximum Power Point Tracking (MPPT)
- Digital Phase-Locked Loop (PLL)
- System islanding and Fault handling

The dsPIC DSC device offers intelligent power peripherals specifically designed for power conversion applications. These intelligent power peripherals include the High-Speed PWM, High-Speed 10-bit ADC, and High-Speed Analog Comparator modules. These peripheral modules include features that ease the control of any Switch Mode Power Supply with a high-resolution PWM, flexible ADC triggering, and comparator Fault handling. In addition to the intelligent power peripherals, the dsPIC DSC also provides built-in peripherals for digital communications including I²C™, SPI and UART modules that can be used for power management and housekeeping functions.

A high-level diagram of the solar microinverter software structure is shown in Figure 35. As shown in this figure, the software is broadly partitioned into three parts:

- Solar Microinverter State Machine
- Power conversion routines
- User Interface Software

FIGURE 34: GRID-CONNECTED SOLAR MICROINVERTER BLOCK DIAGRAM


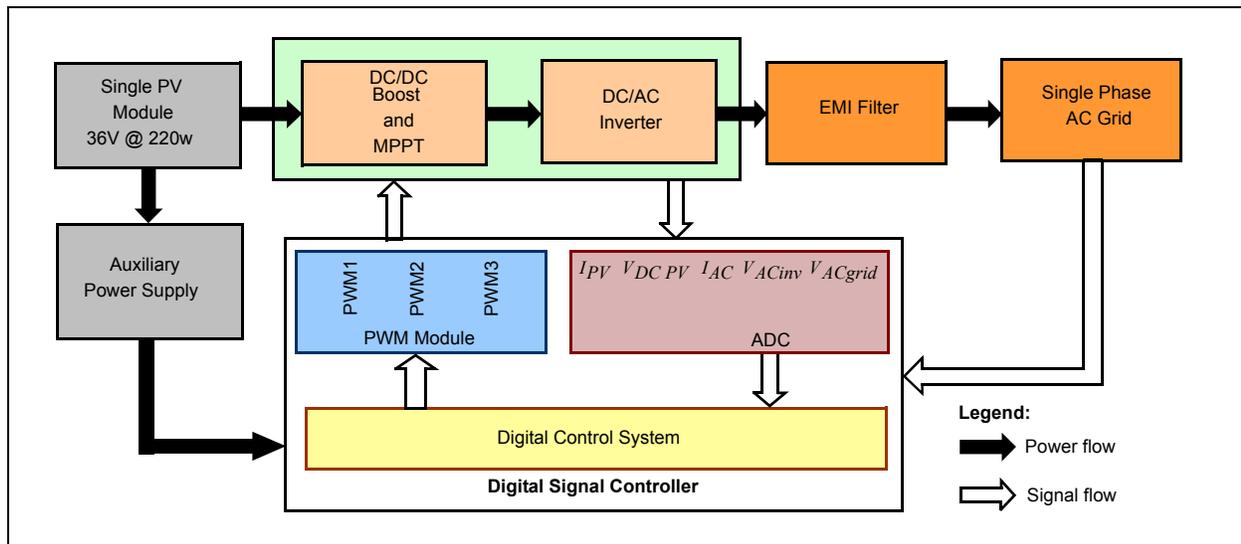


FIGURE 35: GRID-CONNECTED SOLAR MICROINVERTER SOFTWARE: HIGH-LEVEL PARTITIONS

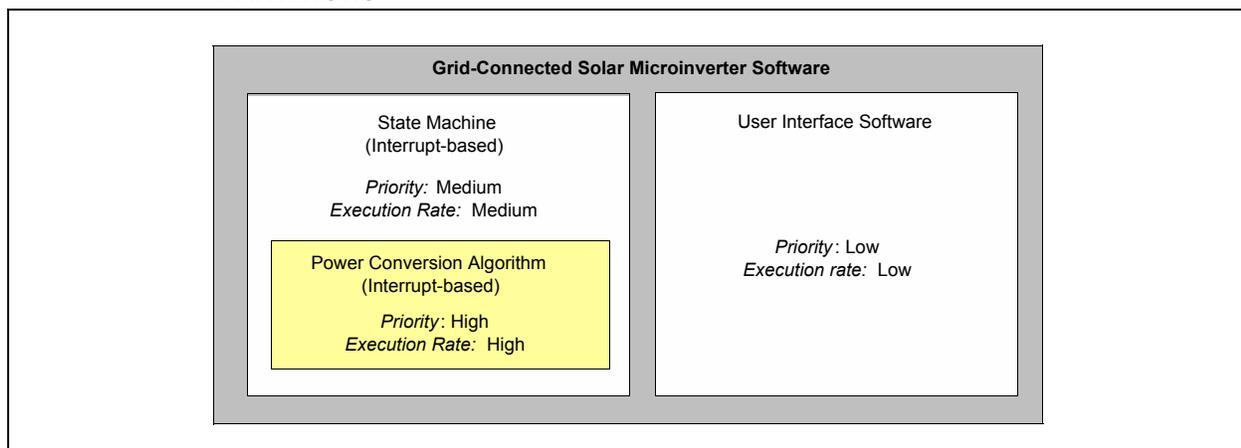

System Initialization

When the solar microinverter is turned ON, the system initializes all peripherals, variables and constants. At this time the state machine has been initialized to the SYSTEM_STARTUP state. Inside the state machine the following Faults are continuously monitored:

- Grid voltage condition
- Inverter output AC current condition
- PV panel voltage condition

Modes of Operation

Each mode of operation for the reference design is described in the following sections.

Figure 36 shows the state diagram for the reference design.

SYSTEM_STARTUP

If any of the previously mentioned Faults are detected, the state machine will switch the system state to SYSTEM_ERROR mode.

In SYSTEM_STARTUP mode, the state machine will first determine the input PV voltage and the output grid voltage and the grid frequency before entering normal operation. Before proceeding to DAY_MODE, certain variables are reinitialized to ensure reliable operation of the system.

DAY_MODE

DAY_MODE is the normal mode of operation. In this mode, the solar microinverter delivers the maximum available energy from the PV panel to the single-phase grid. The ADC peripheral of the device is triggered by the PWM to sample all of the analog feedback signals. The PLL generates sine current reference in phase and synchronizes with the grid voltage. The MPPT control loop calculates the magnitude of the current output current reference to make sure the inverter system is feeding the maximum available energy from the PV module. If any of these conditions are not met, the system state machine switches to the SYSTEM_ERROR state.

STANDBY_MODE

The system state switches to STANDBY_MODE when there is insufficient energy available from the connected PV panel or the PV panel voltage is not within the specified limit. All feedback signals are being continuously monitored and checked for all of the previously mentioned input and output conditions and faults in the system. The system switches to the SYSTEM_ERROR mode of operation, if there are any faults or the grid voltage moves away from the specified limit.


SYSTEM_ERROR

The system state switches to SYSTEM_ERROR mode if any of the following conditions occur:

- Grid undervoltage/overvoltage
- Grid out of frequency range
- Flyback MOSFET overcurrent
- Inverter output current peak
- PV undervoltage/overvoltage

As soon as the system switches to the SYSTEM_ERROR state, the PWM drive signals are disabled and placed into a “safe” state. During SYSTEM_ERROR mode, the system state continuously checks the input and output voltage conditions. If faults are removed, and the PV panel, grid voltage, and grid frequency are under the specified limit, the system switches to SYSTEM_STARTUP mode to reliably turn the solar inverter ON and start supplying the available energy to the grid.

FIGURE 36: STATE MACHINE DIAGRAM

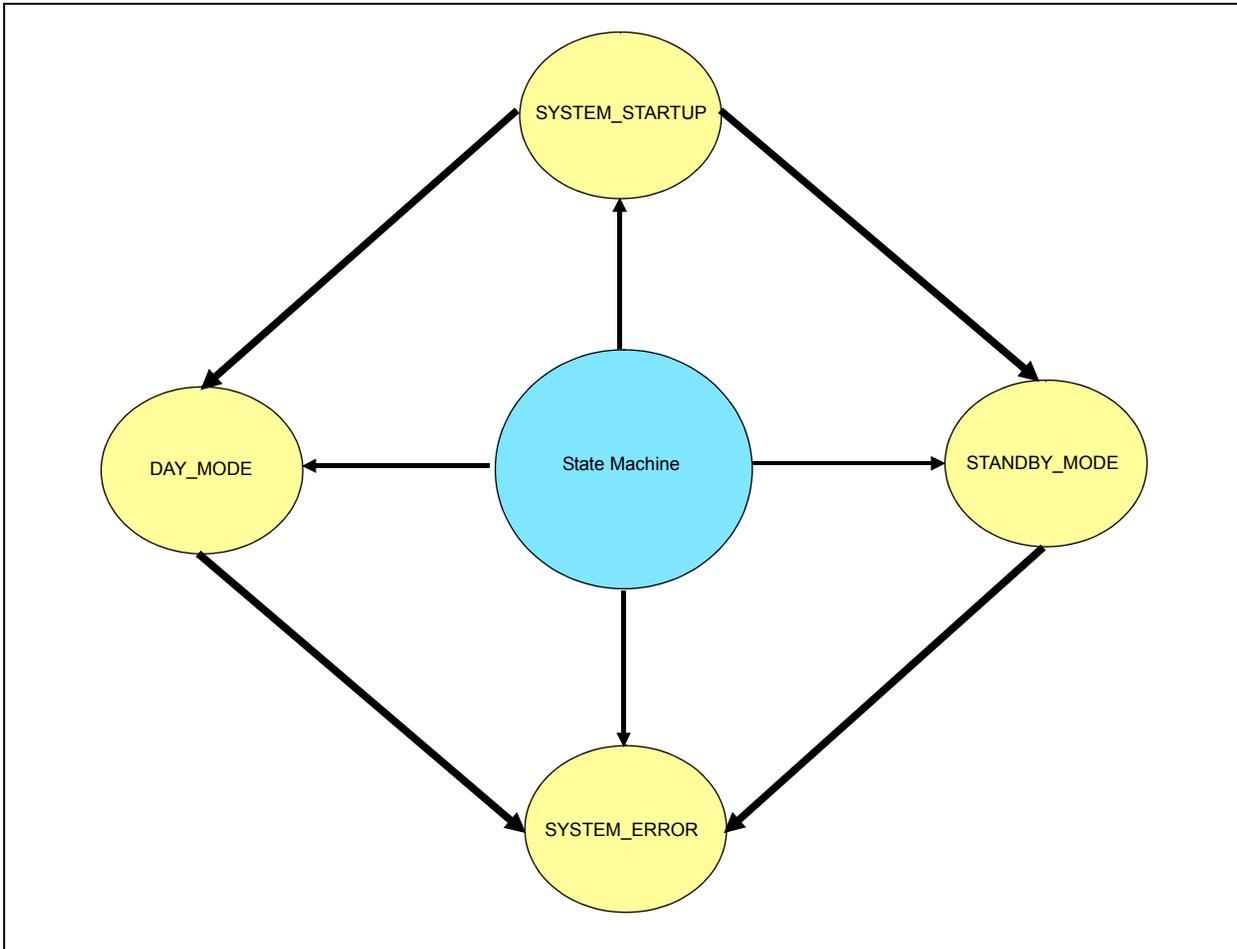

SINGLE-STAGE SINGLE CONVERTER LIMITATIONS


The following are the limitations of a single-stage single converter design when compared to a single-stage interleaved converter:

- Current ripple cancellation is not possible, thus a bigger input and output capacitor is required
- Larger magnetic core
- Higher current rating of semiconductor devices

The interleaved converter can overcome these limitations. It contains two flyback converters, which are parallel coupled and are 180° out of phase with respect to each other, as shown in Figure 37.

At the input side, the total input current drawn from the PV panel equals the sum of the two Flyback MOSFET currents (I_{pv1} and I_{pv2}). Because the ripple currents through the two flyback transformers/MOSFETs are out of phase, they cancel each other and reduce the total ripple current in the input side. At a duty cycle of 50%, the best cancellation of ripple currents is possible. At the output side, current through the output capacitor (I_C) equals the sum of the two diode currents (I_{D1} and I_{D2}) minus the output current (I_{load}), as shown previously in Figure 16.

FIGURE 37: INTERLEAVED FLYBACK CIRCUIT

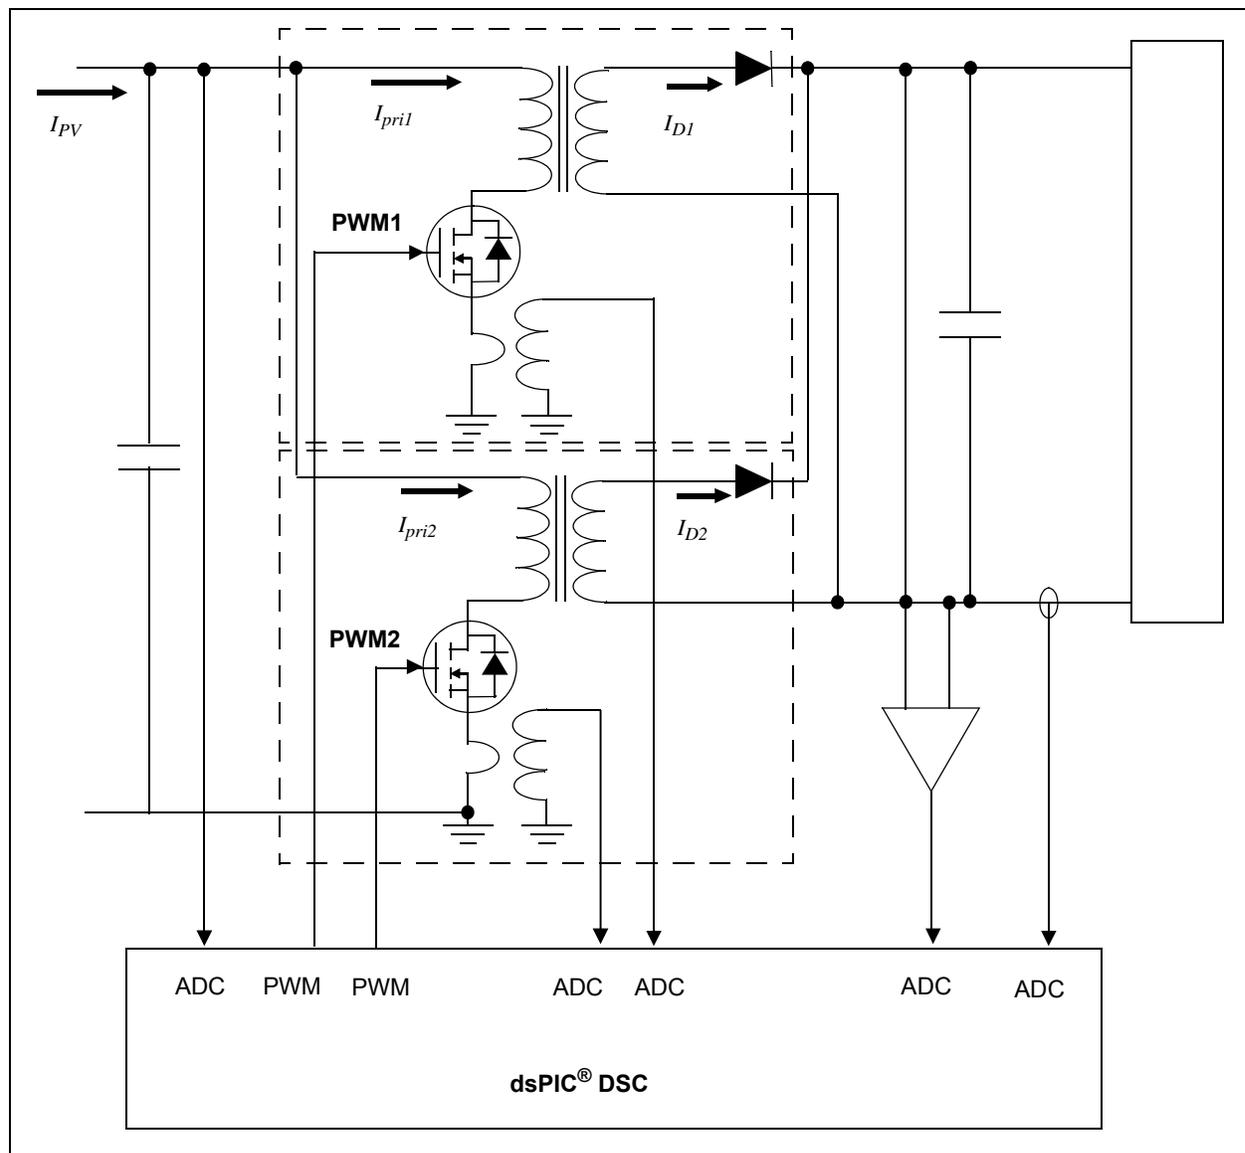

AN1338


The solar microinverter system uses the average current mode control method to meet the system requirements. For the grid-connected microinverter system, this control method is used to generate sinusoidal output current. The control method operates in Continuous Conduction mode for most of the operating points of the converter. The operation is primarily based on the value of the load current at any point and the selection of magnetizing inductor of the flyback transformer.

The various advantages offered by the average current mode control over other methods include:

- Suitable for operation at higher power levels
- Less ripple current in the flyback transformer
- Reduces EMI filter requirements
- Less rms current will be seen by the transformer primary
- Continuous Conduction mode operation is possible

To generate the sinusoidal shape for the output voltage/current, sinusoidal pattern is generated in software. The control system controls the ON time of the flyback MOSFET in order to generate the necessary shape of the output voltage/current. Figure 38 shows the block diagram of the digital average current mode control scheme.

FIGURE 38: CONTROL LOOP DIAGRAM

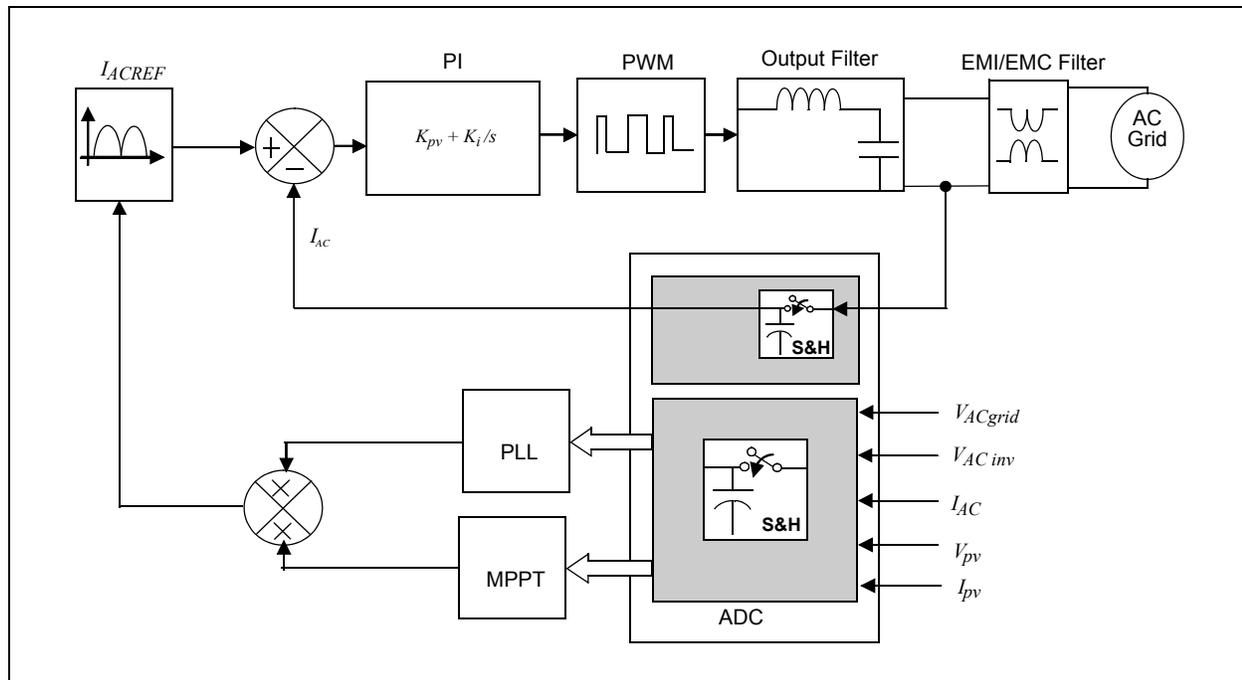

Control Loops

The grid-connected solar microinverter control system includes the following control loops:

- Digital Phase-Locked Loop (PLL)
- MPPT Loop
- Current Control Loop
- Load Balance Control Loop

DIGITAL PHASE-LOCKED LOOP (PLL)

In systems connected to the grid, a critical component of the converter's control system is the PLL that generates the grid voltage's frequency and phase angle for the control to synchronize the output to the grid. The estimated frequency, ω_e , and phase angle, θ_e , of the grid voltage by the PLL can be used not only for control and signal generation, through synthesis or transformations, but also in protection to detect when the converter has entered an islanded mode. The grid-connected solar microinverter PLL has been implemented by hardware as well as software zero-crossing detect of grid voltage. Hardware zero-crossing detect is shown in Figure 33.


In software, grid voltage is sampled at every ADC trigger and the polarity of the grid voltage is stored in a register. In every sample grid voltage polarity has been checked. If there is change in grid voltage polarity, software sets the zero voltage detect flag. A period counter register stores the total number of interrupts that occur between two zero-crossing detections. The period counter register value then gives half of the period value of the grid voltage, as the time between the two interrupts is fixed in software and never changes. The period value determines the phase angle increments for sine table reference generation from the sine table. The sine table consists of 512 elements for generating 0-90 degrees of sine reference. As 90-180 degrees of the sine reference is a mirror image of 0 to 90 degrees. Therefore, a 0-180 degree, half sine reference is generated in phase and is synchronized with the grid voltage.

MPPT LOOP

Two algorithms are commonly used to track the MPPT: the Perturb and Observe (P&O) method and the Incremental Conductance (IncCond) method. The reference design uses the P&O method for MPPT. Figure 39 presents the control flow chart of the P&O algorithm. The MPP tracker operates by periodically incrementing or decrementing the current reference.

In Figure 39, *Set MPPT reference* denotes the perturbation of the solar array voltage, and *MPPT ref+* and *MPPT ref-* represent the subsequent perturbation in the same or opposite direction, respectively. The MPPT reference decides the peak value of sine reference current generated by the PLL.

FIGURE 39: MPPT CONTROL LOOP FLOWCHART

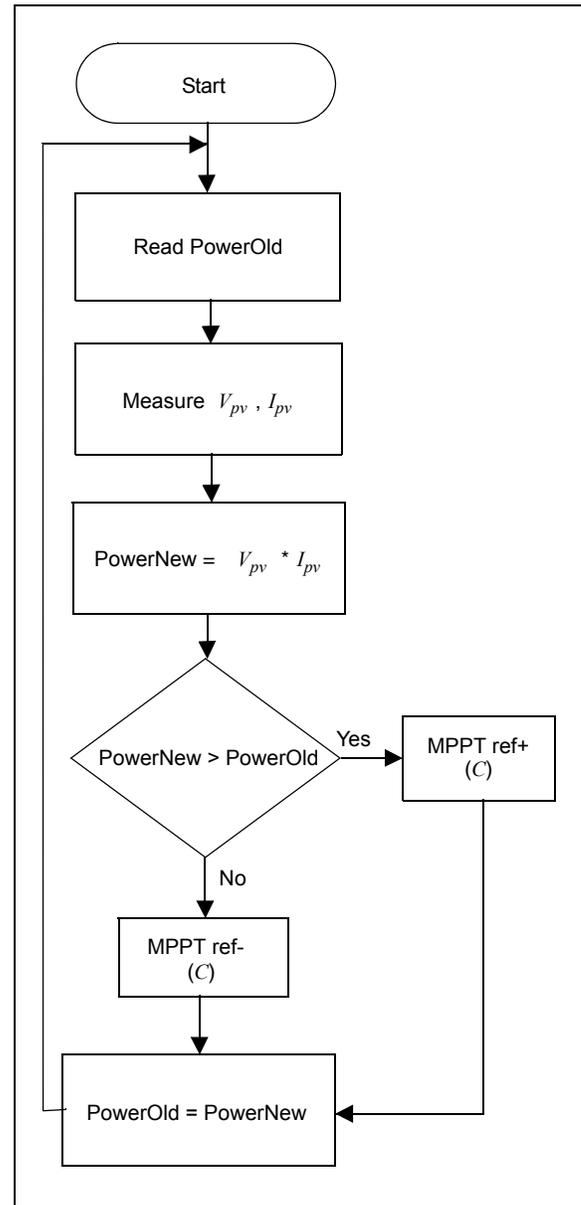

CURRENT CONTROL LOOP

The current control loop is a PI controller and is the heart of the control system. This loop corrects the errors between these two currents, which are the inputs to the current control loop:


- Reference current signal (I_{ACREF})
- Input current (I_{AC})

The output of the current control loop is a control signal, which ensures that the input current (I_{AC}) follows the reference current (I_{ACREF}). The current control loop executes at a rate of 57 kHz and its bandwidth is 2500 Hz for a switching frequency of 114 kHz. The output of the current control loop decides the duty cycle (D) required for switching the MOSFETs.

Analysis of a Flyback Converter

A flyback converter's equivalent non-isolated circuit is like a buck-boost converter; therefore, for modeling purposes and to calculate control loop coefficients, a buck-boost converter will be used. A buck-boost converter, like the boost converter, is a highly nonlinear system. When the system is operated in Continuous Conduction mode, the relation between the duty ratio and output voltage and current is nonlinear. The challenge is to produce a sine wave current wave shape. A buck-boost converter circuit is shown in [Figure 40](#).

FIGURE 40: BUCK-BOOST CONVERTER

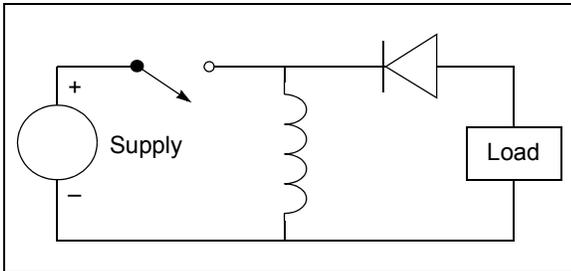

The flyback transformer magnetizing inductance has been replaced by a buck-boost inductor. The switch is given a duty cycle, D . The goal is to drive a rectified sine wave through the load. The topology of the buck-boost produces an inverted output voltage. Therefore, the average current through the diode and load should look like an inverted rectified sine wave. The only current stiff element in the system is the inductor (transformer magnetizing inductance). The current in the inductor does not change instantaneously. The load current is given by [Equation 20](#).

EQUATION 20:

$$I_{load} = I_L(1 - D)$$

I_{load} represents I_{AC} in the flyback inverter system, I_L represents current through the magnetizing inductance of the flyback transformer, I_L^* represents I_{ACref} and D represents the duty of the flyback MOSFET. G is the control loop compensator block coefficient K_p and K_i .

The fundamental equation of the inductor is expressed by [Equation 21](#).

EQUATION 21:

$$V_x = sL I_L$$

To control the current, we can close the loop on current with the gain (G). That is, we apply a voltage proportional to current error as expressed by [Equation 22](#).

EQUATION 22:

$$V_x = G(I_L^* - I_L)$$

$$G = \left(K_p + \frac{K_i}{s} \right)$$

$$V_x = G \frac{(I_{load}^* - I_{load})}{(1 - D)}$$

From basic power electronic theory

$$V_x = V_{in} * D - (1 - D) * V_o$$

The output voltage V_o is the inverted rectified voltage obtained by directly connecting the grid via a thyristor bridge to the output of the flyback circuit. Since we measure V_{in} and V_o , we can obtain D (in [Equation 22](#)), as shown in [Equation 23](#).

EQUATION 23:

$$D' = G \frac{(I_{load}^* - I_{load})}{(1 - D)(V_{in} + V_o)} + \frac{V_o}{(V_{in} + V_o)}$$

The input and output voltage relation of the buck-boost converter is expressed by [Equation 24](#).

EQUATION 24:

$$(V_{in} + V_o) \cdot (1 - D) = V_{in}$$

From [Equation 23](#) and [Equation 24](#), the desired duty cycle can be calculated, as shown in [Equation 25](#).

EQUATION 25:

$$D' = G \frac{(I_{load}^* - I_{load})}{V_{in}} + \frac{V_o}{V_{in} + V_o}$$

Where I_{load}^* is a rectified sinusoid.

The first term is the contribution of PI compensator. The bandwidth of the PI compensator is given by G/L rad/s.

The second term is the decouple contribution. The goal of this term is to allow the current to follow the sine shape without a controller. The contribution of the controller is small over and above the contribution of the decouple term.

LOAD BALANCE CONTROL LOOP

The individual output voltage of each flyback converter may differ by a small value. This drift is possible because of differences in the internal characteristics of the MOSFETs, internal resistances of the transformer windings, capacitors and the diodes. Therefore, when the same duty cycle is applied to both of the MOSFETs, it may result in unequal sharing of the load between the two flyback converter stages. This necessitates the presence of a load balance control loop that balances the currents in the two flyback converter switches, which in turn results in the equal sharing of load between the two converters.

One of the inputs to the load balance control loop is the difference between the two MOSFET currents ($I_{pv1} - I_{pv2}$) of the two flyback converters. The other input, which acts as a reference to this control loop, is tied to zero. This control loop mainly corrects the difference between the MOSFET currents and brings it close to the reference input, which is zero. The output of the load balance control loop will be a duty correction term (ΔD), which is added to the main duty cycle, D , to get the duty cycle of the first boost converter, D_1 . The ΔD term is subtracted from the main duty cycle, D , to determine the duty cycle of the second boost converter, D_2 .

Load Balance Error Compensator

Similar to the current error compensator, the load balance compensator is also designed by normalizing the output to a range of -1 to +1. The proportional gain for the load balance compensator is derived using the small signal model of the flyback converter (see [Equation 25](#)).

AN1338

Function Usage in Software

Table 3 lists and describes the functions used in the software (see [Appendix A: “Source Code”](#) for additional information).

TABLE 3: FUNCTION USAGE IN SOFTWARE

File Name	Function Name	Description
Source Files		
PVInverter_main.c	Main()	Calls the function to configure the operating frequency of the device and auxiliary clock.
		Calls the functions for configuring I/O Ports, Timer, ADC and PWM modules.
		Calls the function to configure the state machine.
PVInverter_int.c	initClock()	Configures the operating frequency of the device.
	initPWM()	Configure the PWM module.
	initADC()	Configure the ADC module.
	initIOports()	Configure I/O ports.
	initStateMachineTimer()	Configure Timer2 for system state machine.
PVinverter_isr.c	ADCP0Interrupt()	Read ADC value of all feedback signals.
		Check the input current Fault condition.
		Executes the various control loop.
		Determine zero crossings.
PVInverter_Statemachine.c	T2Interrupt()	Check Fault conditions: PV voltage, Inverter output and Grid voltage.
		System state machine.
	MPPTRoutine()	Calculate input power and determine maximum power.
	LoadBalance()	PI Compensator for balancing flyback converters.
PVInverter_Variable.c	—	Declaration and Initialization of all global variables.
Header Files		
PVInverter_defines.h	—	Defines all the global function prototype and global parameters.
PVInverter_Variable.h	—	Supporting file for PVInverter_Variable.c.
Sinetable512.h	—	Sine table for current reference.
dsp.h	—	Interface to the DSP Library for the dsPIC33F.

Resource Usage in Software

Table 4 lists the resources utilized by the reference design software when developed on a dsPIC33FJ16GS504 device.

TABLE 4: SOFTWARE RESOURCES


Resources	Components	Value
Memory	Program Memory/Flash	7695 Bytes 47%
	Data Memory/RAM	222 Bytes 10%
MIPS	Current Loop @ 57 kHz	MIPS ≈ 27
	MPPT Loop @ 3 * Grid Frequency	
	Load Balance Loop @ 2 kHz	

MATLAB® Modeling

The control system design for the reference design is accomplished using the MATLAB Simulink® model. The various system gains and the parameter values of the PI controllers and the compensators are derived using this model.

Figure 41 shows the solar microinverter MATLAB model, Figure 42 shows the digital control system, and Figure 43 shows the two parallel interleaved flyback converters.

FIGURE 41: MATLAB® MODEL

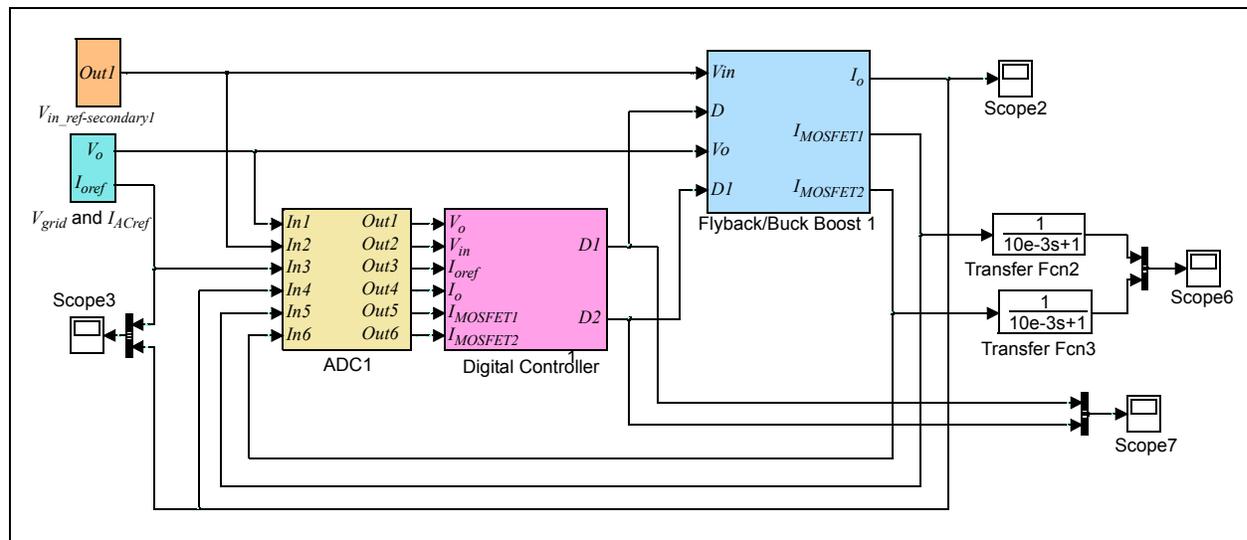

AN1338

FIGURE 42: DIGITAL CONTROL SYSTEM


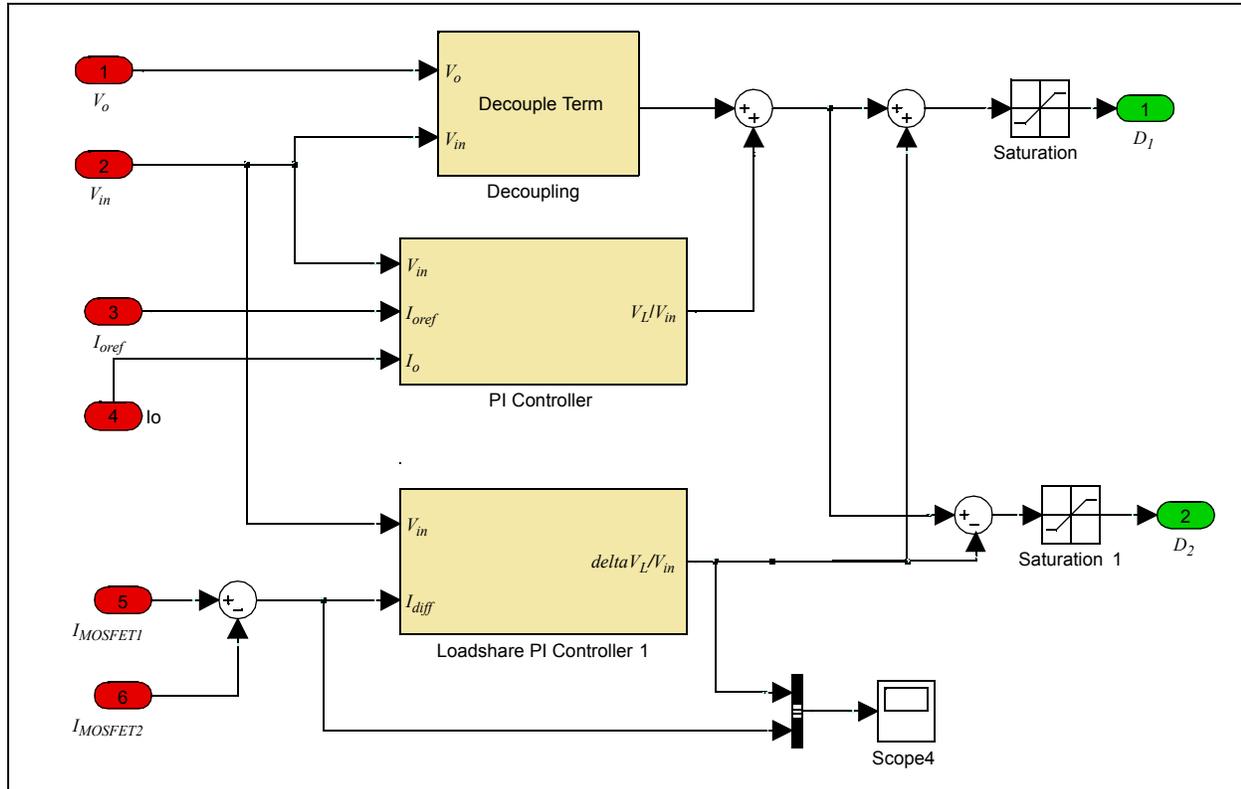


FIGURE 43: TWO PARALLEL INTERLEAVED FLYBACK CONVERTERS

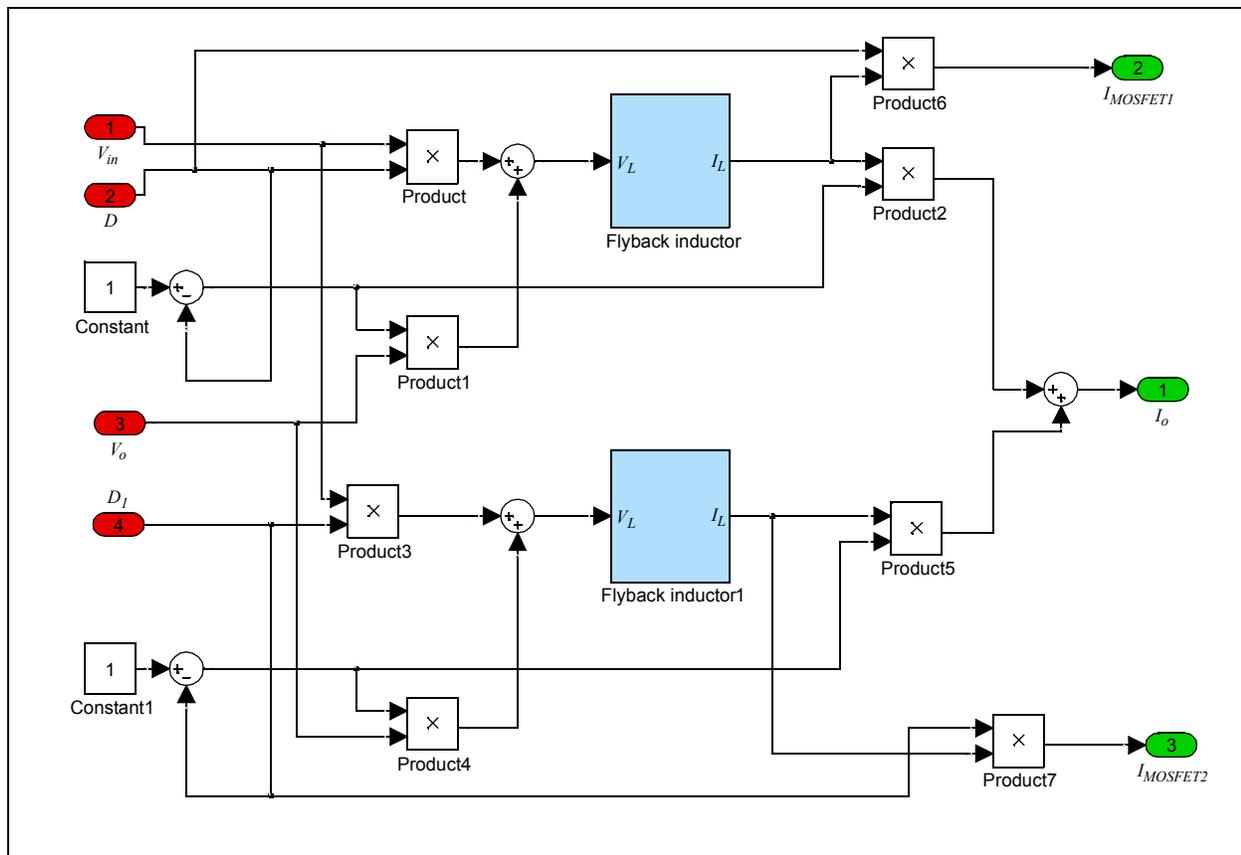

GRID-CONNECTED SOLAR MICROINVERTER REFERENCE DESIGN INSTALLATION AND CONFIGURATION


The reference design is intended to aid the user in the rapid evaluation and development of a grid-connected microinverter using a dsPIC DSC.

This flexible and cost-effective design can be configured in different ways for use with Microchip's specialized Switch Mode Power Supply (SMPS) Digital Signal Controllers. The reference design supports the dsPIC33F "GS" device family. It offers a mounting option to connect either a 28-pin QFN-S device or a generic 100-pin Plug-In Module (PIM).

The system has two flyback circuits to control the grid current. The rated continuous PV panel power that can be connected to the system is 220 watts. Refer to [Appendix B: "Electrical Specifications"](#) for additional information.

Note: Before using the reference design, carefully read the ["Safety Notice"](#) and ["Hardware Design"](#) sections.

FIGURE 44: GRID-CONNECTED SOLAR MICROINVERTER REFERENCE DESIGN BOARD

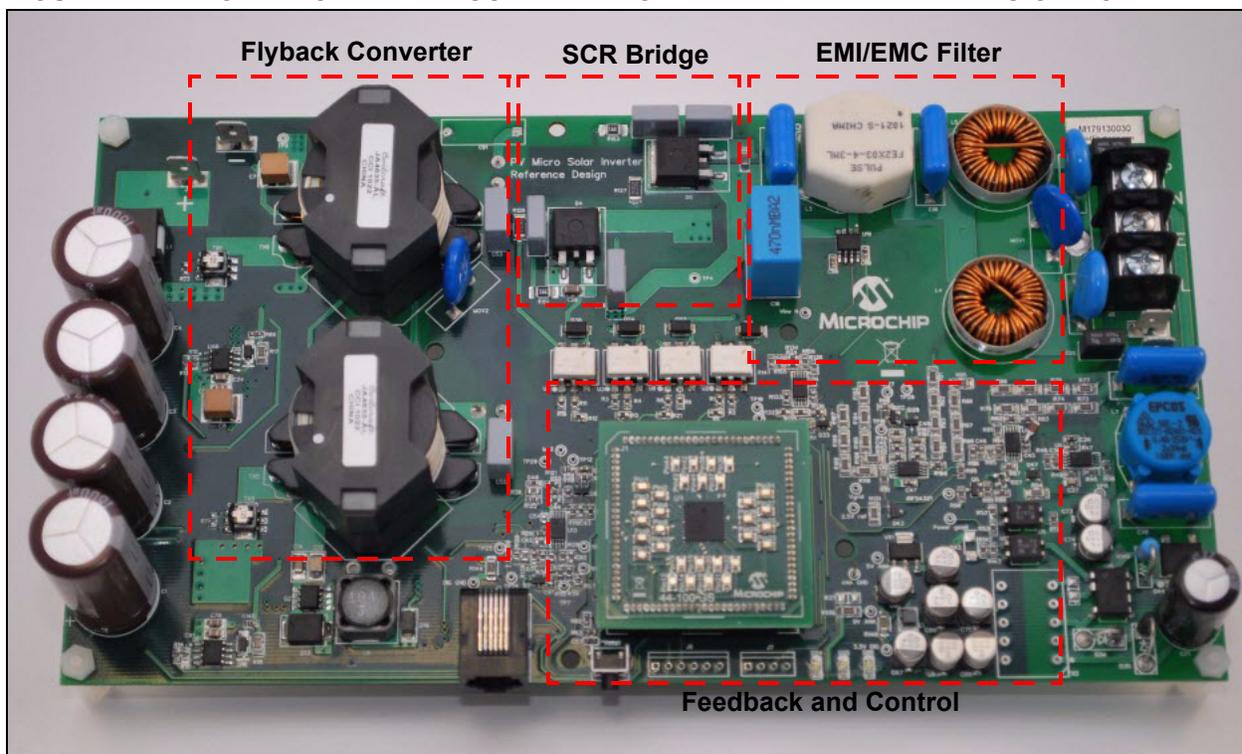


AN1338

Getting Started

SAFETY NOTICE

The safety notices and operating instructions provided should be adhered to, to avoid a safety hazard. If in any doubt, consult your supplier.

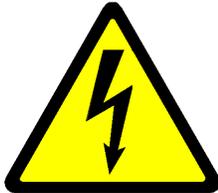

WARNING – This system must be earthed (grounded) at all times.



CAUTION – The system should not be installed, operated, serviced or modified except by qualified personnel who understand the danger of electric shock hazards and have read and understood the user instructions. Any service or modification performed by the user is done at the user's own risk.

For continued protection against the risk of fire, replace the fuse with one of the same type only (i.e., Fast Act Fuse 5A/250V).

The system is intended for evaluation and development purposes and should only be operated in a normal laboratory environment as defined by IEC 61010-1:2001.

- Clean with a dry cloth only
- Operate flat on a bench and do not move the unit during operation
- The system should not be operated without all the supplied covers fully secured in place
- The system should not be connected or operated if there is any apparent damage to the unit

CONNECTING THE SYSTEM

Before connecting the system to either a PV panel or a single-phase grid, conduct a visual inspection and make sure that no components are broken or damaged, and that no foreign objects have fallen inside the enclosure.

If the grid connection cable provided with the reference design has been misplaced or lost, it is recommended that cables used for connecting inverter output to the grid have a 5 Amp fuse. The grid connection wire should be double-insulated, 3-core flex cable with a minimum current rating of 10A (1 mm² 18 AWG). Care should be taken to ensure that stray strands of wire do not short to adjacent terminals of the enclosure and

output terminal of the inverter. If possible, grid-connected wires should be stripped and tinned with solder before connecting to the reference design terminals. A computer power cable can also be used. The recommended output cable size is 1.0 to 1.5 mm² (18-16 AWG) and should have a 600V rating. This cable should also be double insulated or have a protective ground screen.

Access to the terminal screws is provided via holes in the lid of the enclosure. A slotted screwdriver should be used. The system connections are shown in [Figure 44](#).

Note: The Microinverter is shipped with a standard universal adapter plug for convenience. This adapter does not offer electrical safety; therefore, an additional wire should be connected for Earth ground.

CONNECTING THE HARDWARE

Before attempting to power-up the system, the following recommended hardware connection process must be completed.

To set up the system, complete the following steps:

1. Ensure the system is OFF by setting the ON/OFF switch to the OFF position.
2. Connect the grid connection cable to the microinverter output and to the grid directly or through an auto-transformer (i.e., Variac).
3. Connect a differential probe and multimeter to the output terminal to measure the output voltage.
4. Cover the PV panel to make sure its output voltage is very low. A dark cloth or cardboard can be used.
5. Connect the multimeter/scope probe to read the PV voltage.
6. Connect the positive terminal of the PV panel cable to the positive terminal of the microinverter.
7. Connect the negative terminal of the PV panel cable to the negative terminal of the microinverter.
8. Increase the grid voltage to 110/220 VAC if it is connected through the auto-transformer or the grid voltage. Make sure the multimeter/scope reads 110/220 VAC at the output terminal of the reference design.
9. If it reads 110/220 VAC voltage at the output terminal, this means the grid connection is okay.
10. Connect a current probe to one of the grid connection wires (Phase/Neutral). The direction of the current probe should follow the current flowing to the grid.
11. Remove the cover from the PV panel.

12. The input of the solar microinverter voltage should be equal to the expected PV output voltage. If it is not, DO NOT turn the system ON and contact a local Microchip Field Application Engineer.
13. If the solar microinverter voltage is equal to the expected PV output voltage, set the ON/OFF switch to the ON position to start supplying energy to the grid from the grid-connected PV panel.
14. Observe the grid voltage and current waveform. The current waveform should be sinusoidal and in phase with the grid voltage.
15. To turn off the solar microinverter, place the unit into Fault mode by removing the grid voltage, and then set the ON/OFF switch to the OFF position.

Note: DO NOT turn the solar microinverter off when it is delivering energy to the grid.
--

AN1338

LABORATORY TEST RESULTS AND WAVEFORMS

Figure 45 through Figure 48 show the waveforms for the grid voltage, grid current, system islanding, and MPP voltage. In the following oscilloscope images, the waveforms are designated as follows:

- CH1 = Yellow → Solar microinverter input voltage
- CH2 = Green → Solar microinverter input current
- CH3 = Violet → Grid voltage
- CH4 = Magenta → Grid current

This information aids in validating the digital implementation on a dsPIC DSC device.

FIGURE 45: GRID VOLTAGE AND GRID CURRENT

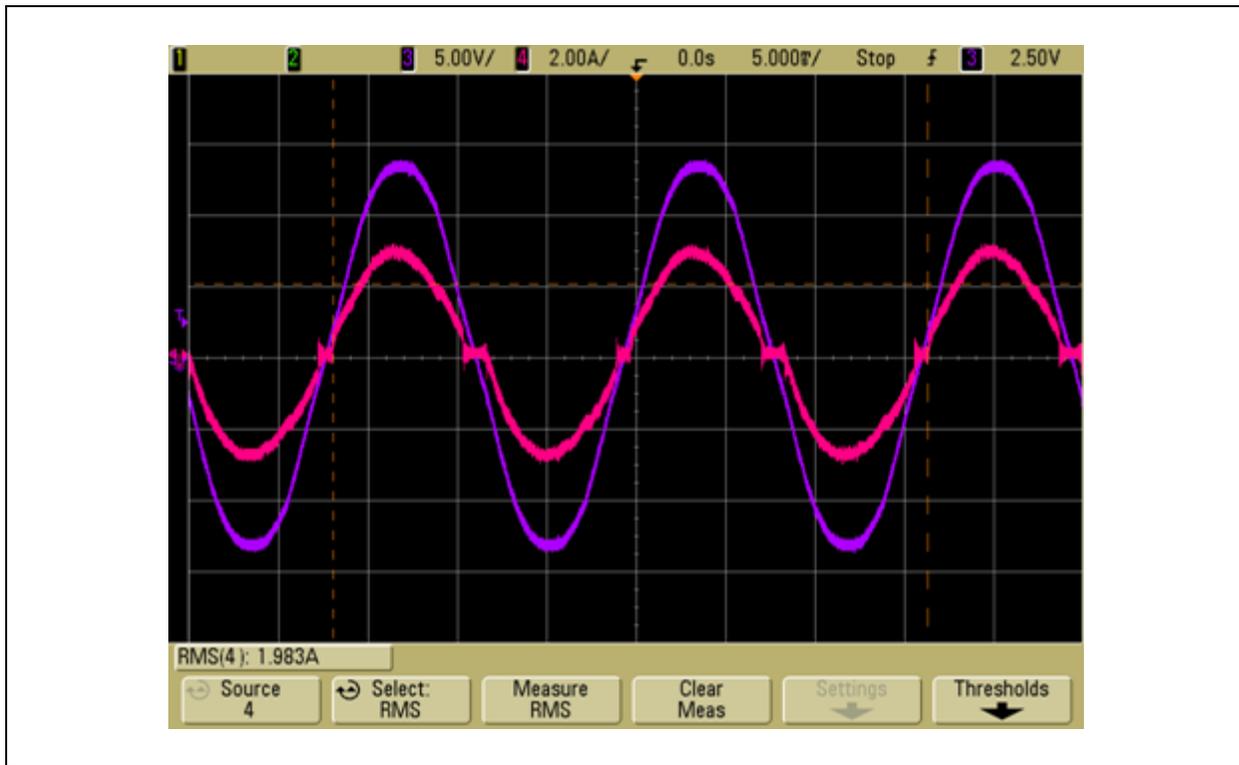


FIGURE 46: SYSTEM ISLANDING: SYSTEM TURNED OFF WHEN GRID FAILS



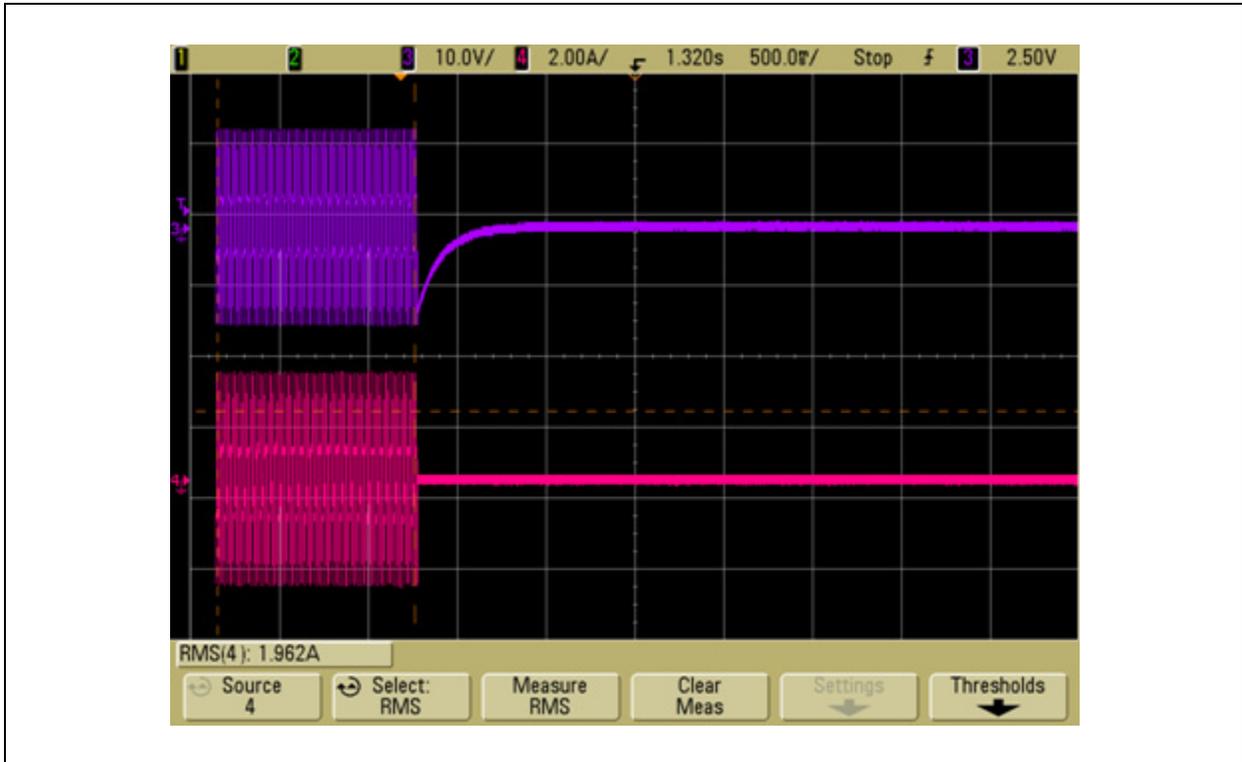


FIGURE 47: SYSTEM ISLANDING: SYSTEM TURNED OFF WHEN GRID FAILS AT PEAK OF AC VOLTAGE

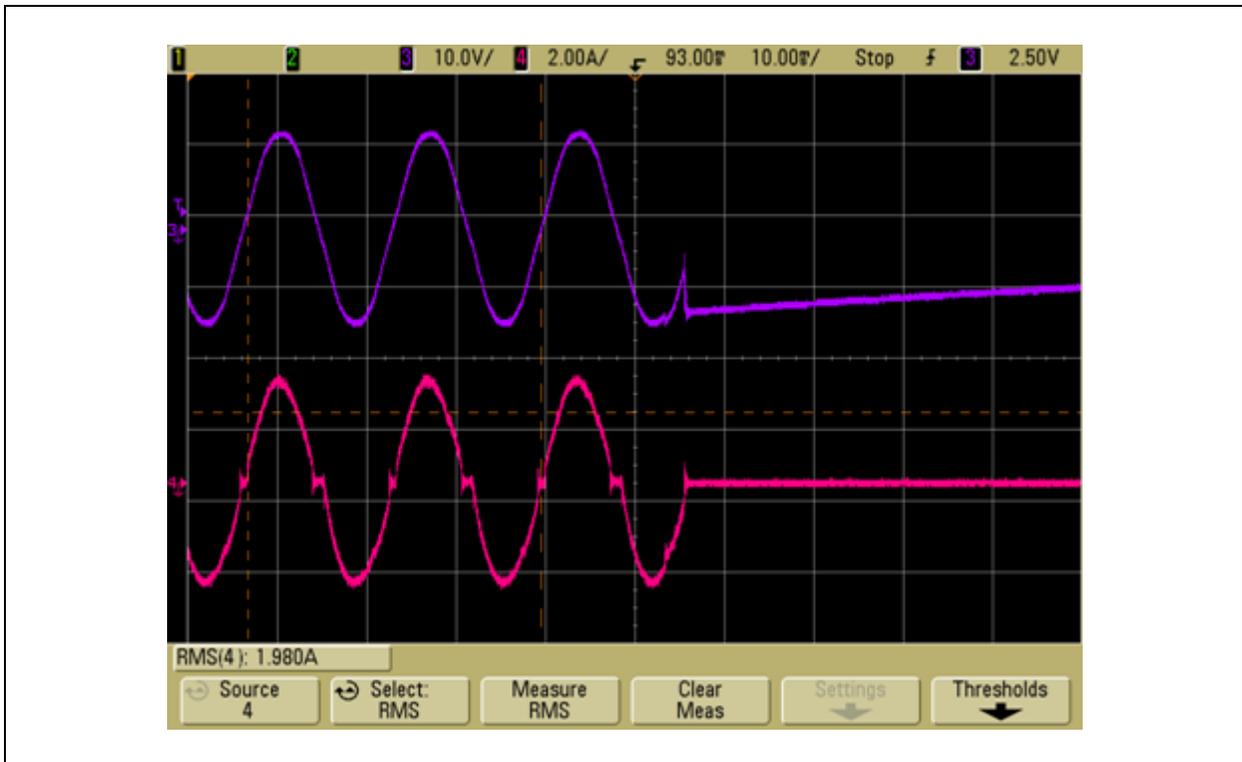

AN1338

FIGURE 48: SYSTEM ISLANDING: SYSTEM TURNED OFF WHEN GRID FAILS AT ZERO OF AC VOLTAGE

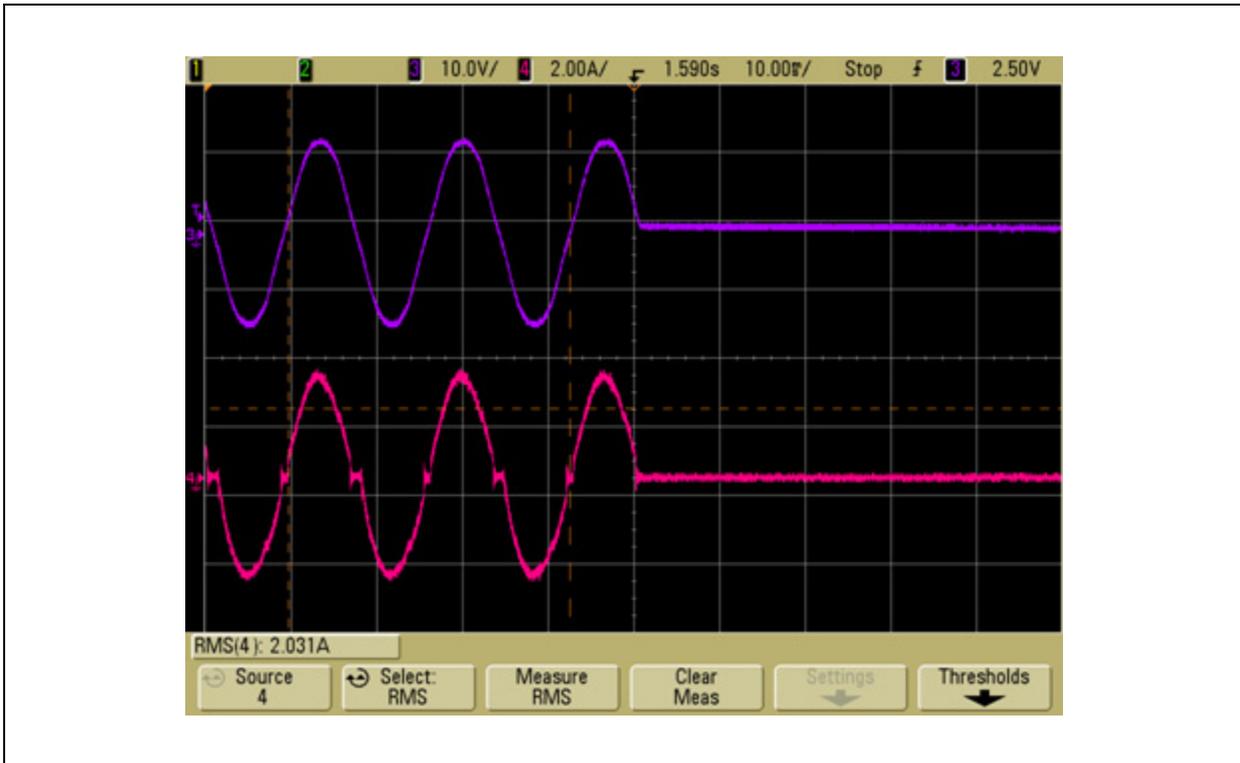

APPENDIX A: SOURCE CODE

Software License Agreement

The software supplied herewith by Microchip Technology Incorporated (the "Company") is intended and supplied to you, the Company's customer, for use solely and exclusively with products manufactured by the Company.

The software is owned by the Company and/or its supplier, and is protected under applicable copyright laws. All rights are reserved. Any use in violation of the foregoing restrictions may subject the user to criminal sanctions under applicable laws, as well as to civil liability for the breach of the terms and conditions of this license.

THIS SOFTWARE IS PROVIDED IN AN "AS IS" CONDITION. NO WARRANTIES, WHETHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE APPLY TO THIS SOFTWARE. THE COMPANY SHALL NOT, IN ANY CIRCUMSTANCES, BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, FOR ANY REASON WHATSOEVER.

All of the software covered in this application note is available as a single WinZip® archive file. This archive can be downloaded from the Microchip corporate Web site at:

www.microchip.com

AN1338

APPENDIX B: ELECTRICAL SPECIFICATIONS

The electrical specifications for the Grid-Connected Solar Microinverter Reference Design are provided in [Table B-1](#).

TABLE B-1: ELECTRICAL SPECIFICATIONS

Parameter	Description	Minimum	Typical	Maximum	Units
η	Efficiency (110V)	—	—	90.5	%
η	Efficiency (220V)	—	—	92	%
f_{im}	Grid Frequency Limits (50 Hz)	47	50	53	Hz
f_{im}	Grid Frequency Limits (60 Hz)	57	63	60	Hz
I_{in}	PV Panel Output Current	—	—	10	A
I_{out}	Output Current (110V)	—	1.68	2.05	A
I_{out}	Output Current (220V)	—	0.84	1.03	A
I_{sc}	Input Short Circuit Current	—	—	10	A
I_{THD}	Output Current THD	—	5	—	%
$MPPT$	Maximum Power Point Tracking (MPPT)	97	98	—	%
PF	Output Power Factor	0.95	—	—	—
P_{MPP}	Maximum PV Power	—	—	220	W
P_{out}	Output Power	—	—	185	W
V_{grid}	Grid Voltage (110V)	90	110	140	V
V_{grid}	Grid Voltage (220V)	180	220	264	V
V_{in}	PV Panel Voltage	25	36	55	V
V_{MPP}	Maximum Power Point PV Voltage	25	36	45	V

APPENDIX C: DESIGN PACKAGE

A complete design package for this reference design is available as a single WinZip archive file. This archive can be downloaded from the Microchip corporate Web site at: www.microchip.com

C.1 Design Package Contents

The design package contains the following items:

- Reference design schematics
- Fabrication drawings
- Bill of materials (BOM)
- Assembly drawings
- Hardware design Gerber files

APPENDIX D: GLOSSARY

TABLE D-1: SYMBOLS AND TERMS

Symbol/ Term	Description
α	Taylor coefficient
β	Taylor coefficient
EMC	Electromagnetic Compatibility
EMI	Electromagnetic Interference
I_{sc}	PV module short circuit current
MPP	Maximum Power Point
MPPT	Maximum Power Point Tracker (MPP)
P_{MPP}	Power at MPP
PV	Photovoltaic
PWM	Pulse-Width Modulation
THD	Total Harmonic Distortion
\hat{U}	Amplitude of PV voltage ripple
U_{MPP}	Voltage at MPP
V_{ds}	MOSFET drain-to-source voltage
V_{in}	PV microinverter system input voltage
V_{open}	PV module open circuit voltage
$V_{rectified}$	Rectified voltage at inverter output
$V_{reflected}$	Secondary winding reflected voltage at primary of flyback transformer
W	Wattage
ω	Frequency in radians per second

APPENDIX E: HARDWARE AND SOFTWARE CHANGES FOR 220 VAC UNITS

This appendix describes the changes in hardware and software for a 220 VAC unit as compared to a 110 VAC unit.

E.1 Hardware Changes

- **Grid Voltage Sense**

The feedback resistors, R99 and R100, have been changed to 4.7k to make sure the analog pin voltage of the dsPIC DSC is between 0 to 3.3V at maximum grid voltage (264 VAC).
- **Zero-Crossing Detect**

The feedback resistors, R81 and R82, have been changed to 4.7k to make sure the differential output voltage is between 0 to 5V at maximum grid voltage (264 VAC).
- **Inverter Output Voltage Sense**

The feedback resistors, R111 and R112, have been changed to 4.7k to make sure the analog pin voltage of the dsPIC DSC is between 0 to 3.3V at maximum grid voltage (264 VAC).
- **Grid AC Current Sense**

The DC offset voltage resistor divider value was changed to R147 = 2.4K Ohm, and R155 = 3.3K Ohm. Also, the feedback gain resistor value of U14 was changed to R132 = R133 = 1.6K Ohm, and R135 = 5.1K Ohm to make sure the I_{AC} sense voltage is between 0 to 3.3V at full output power.
- **PV Voltage Sense**

The PV voltage sense resistor divider network value was changed to R123 = 160K Ohm to make sure the AC voltage and PV voltage have the same normalized value in Q15 format.
- **Flyback Transformer TX5 and TX6**

The flyback transformer turns ratio was changed to $N_p = 6$ and $N_s = 72$, and its part number. Please refer to the 220 VAC unit Bill of Materials for more information, which is included in the WinZip archive file for the reference design.

E.2 Software Changes

- **Grid Voltage Frequency Limit**

The 220 VAC unit is designed to work with 50 Hz grid frequency; therefore, its frequency limit of operation was changed to address 45 to 55 Hz.
- **Grid Voltage Limit**

The undervoltage limit was changed to 180 VAC and the overvoltage limit was changed to 264 VAC. Refer to the reference design source code for more information.
- **Inverter Output Voltage Limit**

The undervoltage limit was changed to 180 VAC and the overvoltage limit was changed to 264 VAC. Refer to the reference design source code for more information.
- **Control Loop Coefficient**

The control loop coefficient is as per the modeling of the 220 VAC unit. Refer to the reference design source code for more information.

APPENDIX F: KNOWN ISSUES AND IMPROVEMENTS

This appendix documents any known issues and potential hardware/software improvements that relate to Microchip's Grid-Connected Solar Microinverter Reference Design.

F.1 Known Issues

F.1.1 EFFICIENCY

The Beta build peak efficiency currently measures 90.5% for the 110V units and 92% for the 220V Solar Microinverter units. The target peak efficiency was 93% for the 110V units and 94% for the 220V units. See [Section F.2 "Potential Hardware/Software Improvements"](#) for a complete list of potential improvements to be made to enhance the efficiency of the Solar Microinverter Reference Design.

F.1.2 MAXIMUM POWER POINT TRACKING (MPPT)

The current Maximum Power Point Tracking algorithm tracks the maximum power point with approximately 98% accuracy. The target tracking percentage was 99%.

F.1.3 LIGHT LOAD OPERATION

At high input voltages and/or high grid voltages, the Solar Microinverter might be unstable at light loads. This is due to the limits on the MPPT algorithm. Reducing the minimum allowable MPPT current reference should allow the system to work better at light loads. As soon as more energy is available from the PV panel the system will not observe this issue.

F.2 Potential Hardware/Software Improvements

This section lists all potential hardware and software improvements that may help improve the performance of the Solar Microinverter Reference Design.

F.2.1 HARDWARE IMPROVEMENTS FOR EFFICIENCY GAIN

The auxiliary power is derived from the PV panel input. A buck regulator steps down the input voltage of 25 Vdc to 55 Vdc down to 12 Vdc. Two linear voltage regulators step down the 12 Vdc to 5 Vdc and 3.3 Vdc. By replacing the 5V linear regulator with a highly-efficient step down regulator, a gain in efficiency of approximately 0.5% can be achieved.

The flyback circuit, including the active clamp and snubber, can be optimized for Zero Voltage Switching (ZVS). Adding ZVS will reduce the turn-on losses (switching losses) associated with this circuit and contributes toward improving overall efficiency. An estimated efficiency gain of 1% is anticipated when implementing ZVS.

The Silicon Controlled Rectifiers (SCRs) can be replaced with MOSFETs to reduce the conduction losses which in return should improve the overall efficiency. The SCR Bridge was selected as a lower cost option as gate drive transformers are not required. This is a trade-off between cost and efficiency. Estimated gains in efficiency of 0.85% (220V) and 1.4% (110V) can be achieved using suitable lower-cost MOSFETs.

F.2.2 SOFTWARE IMPROVEMENTS

To improve the performance of MPPT, the incremental conductance method can be implemented or any of the newer advanced tracking algorithms.

APPENDIX G: FREQUENTLY ASKED QUESTIONS (FAQs)

This Appendix provides answers to frequently asked questions related to Microchip's Grid-Connected Solar Microinverter Reference Design.

Question 1: *Can I connect the Solar Microinverter directly to the power grid?*

Answer: Yes, Microchip's Solar Microinverter Reference Design can be connected directly to the power grid or for evaluation purposes, it can be connected to an AC source with an external load.

If using an AC source with an external load, ensure that the load connected is greater than the power output of the Solar Microinverter. If this precaution is not taken, the solar inverter may try to force current into the programmable AC source, and may potentially damage the equipment.

Question 2: *Can I connect a DC source to the input of the Solar Microinverter?*

Answer: Microchip's Solar Microinverter Reference Design has only been designed and tested for use with PV panels or solar array simulators.

Question 3: *What solar panels are compatible with the Solar Microinverter?*

Answer: Microchip's Solar Microinverter Reference Design can be connected to any PV module having a maximum power rating up to 220 watts with an input voltage range of 25 VDC to 45 VDC, and a maximum open circuit voltage of 55V.

Question 4: *Can I evaluate the Microinverter if I do not have a solar array simulator or PV panel?*

Answer: Microchip's Solar Microinverter Reference Design can be reprogrammed to operate without the Maximum Power Point Tracking (MPPT) algorithm. This will allow a DC source to be used on the input of the Solar Microinverter. Contact your local Field Applications Engineer for more details. (A complete listing of local sales offices is provided on the last page of this document.)

Question 5: *How is efficiency measured on the Solar Microinverter?*

Answer: The efficiency is measured by using a solar array simulator on the input side.

Note: Using a DC power supply may result in inaccurate data.

An oscilloscope is used to measure the input power by averaging the input voltage/current over several cycles (2x line frequency present on the input signal).

Some power meters have averaging capabilities, but the sample size is usually too small. The output power is measured using a power meter. An external AC source and load is connected to the output of the Solar Microinverter and the MPP Tracking algorithm is disabled.

APPENDIX H: REVISION HISTORY

Revision A (July 2010)

This is the initial released version of this document.

Revision B (May 2011)

Minor formatting and text changes were incorporated throughout the document for clarification purposes. In addition, all schematic figures were updated.

Revision C (August 2011)

Formatting and text changes were incorporated throughout the document for clarification purposes.

The following sections were added:

- [Appendix F: “Known Issues and Improvements”](#)
- [Appendix G: “Frequently Asked Questions \(FAQs\)”](#)

Revision D (October 2011)

Formatting and text changes were incorporated throughout the document for clarification purposes.

In addition, an important safety notice was added. See [“Safety Notice”](#) in the [“Getting Started”](#) section.

AN1338

NOTES:

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as “unbreakable.”

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, dsPIC, KEELOQ, KEELOQ logo, MPLAB, PIC, PICmicro, PICSTART, PIC³² logo, rPIC and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

FilterLab, Hampshire, HI-TECH C, Linear Active Thermistor, MXDEV, MXLAB, SEEVAL and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, chipKIT, chipKIT logo, CodeGuard, dsPICDEM, dsPICDEM.net, dsPICworks, dsSPEAK, ECAN, ECONOMONITOR, FanSense, HI-TIDE, In-Circuit Serial Programming, ICSP, Mindi, MiWi, MPASM, MPLAB Certified logo, MPLIB, MPLINK, mTouch, Omniscient Code Generation, PICC, PICC-18, PICDEM, PICDEM.net, PICKit, PICtail, REAL ICE, rLAB, Select Mode, Total Endurance, TSHARC, UniWinDriver, WiperLock and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

© 2010-2011, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

 Printed on recycled paper.

ISBN: 978-1-61341-670-9

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
== ISO/TS 16949:2009 ==



MICROCHIP

Worldwide Sales and Service

AMERICAS

Corporate Office
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://www.microchip.com/support>
Web Address:
www.microchip.com

Atlanta
Duluth, GA
Tel: 678-957-9614
Fax: 678-957-1455

Boston
Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago
Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Cleveland
Independence, OH
Tel: 216-447-0464
Fax: 216-447-0643

Dallas
Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit
Farmington Hills, MI
Tel: 248-538-2250
Fax: 248-538-2260

Indianapolis
Noblesville, IN
Tel: 317-773-8323
Fax: 317-773-5453

Los Angeles
Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608

Santa Clara
Santa Clara, CA
Tel: 408-961-6444
Fax: 408-961-6445

Toronto
Mississauga, Ontario,
Canada
Tel: 905-673-0699
Fax: 905-673-6509

ASIA/PACIFIC

Asia Pacific Office
Suites 3707-14, 37th Floor
Tower 6, The Gateway
Harbour City, Kowloon
Hong Kong
Tel: 852-2401-1200
Fax: 852-2401-3431

Australia - Sydney
Tel: 61-2-9868-6733
Fax: 61-2-9868-6755

China - Beijing
Tel: 86-10-8569-7000
Fax: 86-10-8528-2104

China - Chengdu
Tel: 86-28-8665-5511
Fax: 86-28-8665-7889

China - Chongqing
Tel: 86-23-8980-9588
Fax: 86-23-8980-9500

China - Hangzhou
Tel: 86-571-2819-3187
Fax: 86-571-2819-3189

China - Hong Kong SAR
Tel: 852-2401-1200
Fax: 852-2401-3431

China - Nanjing
Tel: 86-25-8473-2460
Fax: 86-25-8473-2470

China - Qingdao
Tel: 86-532-8502-7355
Fax: 86-532-8502-7205

China - Shanghai
Tel: 86-21-5407-5533
Fax: 86-21-5407-5066

China - Shenyang
Tel: 86-24-2334-2829
Fax: 86-24-2334-2393

China - Shenzhen
Tel: 86-755-8203-2660
Fax: 86-755-8203-1760

China - Wuhan
Tel: 86-27-5980-5300
Fax: 86-27-5980-5118

China - Xian
Tel: 86-29-8833-7252
Fax: 86-29-8833-7256

China - Xiamen
Tel: 86-592-2388138
Fax: 86-592-2388130

China - Zhuhai
Tel: 86-756-3210040
Fax: 86-756-3210049

ASIA/PACIFIC

India - Bangalore
Tel: 91-80-3090-4444
Fax: 91-80-3090-4123

India - New Delhi
Tel: 91-11-4160-8631
Fax: 91-11-4160-8632

India - Pune
Tel: 91-20-2566-1512
Fax: 91-20-2566-1513

Japan - Yokohama
Tel: 81-45-471- 6166
Fax: 81-45-471-6122

Korea - Daegu
Tel: 82-53-744-4301
Fax: 82-53-744-4302

Korea - Seoul
Tel: 82-2-554-7200
Fax: 82-2-558-5932 or
82-2-558-5934

Malaysia - Kuala Lumpur
Tel: 60-3-6201-9857
Fax: 60-3-6201-9859

Malaysia - Penang
Tel: 60-4-227-8870
Fax: 60-4-227-4068

Philippines - Manila
Tel: 63-2-634-9065
Fax: 63-2-634-9069

Singapore
Tel: 65-6334-8870
Fax: 65-6334-8850

Taiwan - Hsin Chu
Tel: 886-3-5778-366
Fax: 886-3-5770-955

Taiwan - Kaohsiung
Tel: 886-7-536-4818
Fax: 886-7-330-9305

Taiwan - Taipei
Tel: 886-2-2500-6610
Fax: 886-2-2508-0102

Thailand - Bangkok
Tel: 66-2-694-1351
Fax: 66-2-694-1350

EUROPE

Austria - Wels
Tel: 43-7242-2244-39
Fax: 43-7242-2244-393

Denmark - Copenhagen
Tel: 45-4450-2828
Fax: 45-4485-2829

France - Paris
Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany - Munich
Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Italy - Milan
Tel: 39-0331-742611
Fax: 39-0331-466781

Netherlands - Drunen
Tel: 31-416-690399
Fax: 31-416-690340

Spain - Madrid
Tel: 34-91-708-08-90
Fax: 34-91-708-08-91

UK - Wokingham
Tel: 44-118-921-5869
Fax: 44-118-921-5820

08/02/11